

IWAKI Metering Pump AX series

Medium pressure hydraulic diaphragm type

Instruction Manual

 Read this manual before use of product

Thank you for selecting the IWAKI METERING PUMP AX series. This instruction manual deals with "*Safety Instructions*", "*Outline*", "*Installation*", "*Operation*" and "*Maintenance*" sections.

Please read through this instruction manual to ensure the optimum performance, safety and service of your pump.

Contents

Important instructions	1
Safety instructions	2
<i>Outline</i>	
1. Unpacking & Inspection	6
2. Principle of Operation	6
3. Identification Codes	7
4. Specifications	9
5. Pump mechanism & Precautions	11
<i>Installation</i>	
6. Before Installation	14
<i>Operation</i>	
7. Before Operation	17
<i>Maintenance</i>	
8. Maintenance & Inspection	20
9. Troubleshooting	24
10. Disassembly & Assembly	25
11. Normal Consumable Parts	35
12. Exploded View	36



This instruction manual should be kept on hand by the end user for quick reference.

Contact us or your nearest dealer if you have any questions.

Important instructions

For the Safe and Correct Handling of the Pump

- "Safety Instruction" section deals with important details about handling of the product. Before use, read this section carefully for the prevention of personal injury or property damage.
- Observe the instructions accompanied with "WARNING" or "CAUTION" in this manual. These instructions are very important for protecting users from dangerous situations.
- The symbols on this instruction manual have the following meanings:

 WARNING	Nonobservance or misapplication of "Warning" sections could lead to a serious accident which may result in death.
 CAUTION	Nonobservance or misapplication of "Caution" sections could lead to personal injury or property damage.

Types of Symbols



Indicates that "Warning" or "Caution" must be exercised. Inside this triangle, a concrete and practical image provided as a warning or caution message is depicted.



Indicates a prohibited action or procedure. Inside or near this circle, a concrete and practical image of the activity to be avoided is depicted.



Indicates an important action or procedure which must be performed or carried out without fail. Failure to follow the instructions herein can lead to malfunction or damage to the pump.

Export Restrictions

Technical information contained in this instruction manual might be treated as controlled technology in your countries, due to agreements in international regime for export control. Please be reminded that export license/permission could be required when this manual is provided, due to export control regulations of your country.

Safety instructions

◀◀For the prevention of damage, electrical shock, and fire▶▶

WARNING

- **Turn off power supply**

Dismantling/assembling the pump unit without turning off power supply may cause an electrical shock. Before engaging in any maintenance and inspection work, be sure to turn power supply off to stop the pump and related devices. Workers should be careful to prevent power source from turning on unintentionally during work.



Turn off power

- **Wear protective clothing**

Always wear protective clothing such as safety goggles and protective gloves when arranging piping or dismantling the pump.



Wear protective gear

- **When checking & replacing the enclosed liquid (Only double diaphragm)**

Always check that power is disconnected before turning the motor fan. Workers should be careful to prevent power source from turning on accidentally during work.



Caution

CAUTION

- **Ventilation**

Poisoning may result when handling a toxic or odorous liquid. Keep good ventilation in a working area.



Caution

- **Fire ban**

Check oil leakage. Repair as necessary and wipe oil off.



Fire ban

- **Do not touch the pump and piping**

The surface temperature of the pump and piping becomes high during the operation with high liquid temperature.



Caution

- **Pay attention to rotating parts**

Be careful not to be caught in rotating parts such as the coupling and shaft. The rotating parts can catch the finger, hand, or hair and can cause serious injury. Also, do not place waste clothes near rotating parts.



Caution

- **Do not remove the coupling cover**

Never remove the Coupling cover during operation. Touching the shaft when it is rotating, serious injury may result.



Prohibition

- **Damaged pumps**

Risk of electrical shock. Do not use damaged pumps.



Prohibition

Safety instructions

《Carriage & Installation》

WARNING

- **Use strong ropes (chains) for lifting up the pump**
Serious injury may result if lifting ropes (chains) break. Check lifting ropes (chains) are strong enough before use.
- **Use eye bolts**
Use eye bolts to lift the pump. Otherwise the pump may break and accidentally fall down, resulting serious injury.
- **Keep away from the pump when it is lifted.**
The pump may fall down accidentally. Do not stay under the lifted pump.



Prohibition

《Piping & Wiring》

WARNING

- **Arrange grounding**
Risk of electrical shock. Do not operate the pump unit without connecting the grounding wire.
- **Specified power only**
Do not apply any power than the specified one on the nameplate. Otherwise damage or fire may result.
- **Install an earth leakage breaker**
Risk of electrical shock. Do not use the pump without a leakage breaker. Install a leakage breaker to reduce the risk of electrical shock.
- **Limited operating site and storage**
Do not install or store the pump in the following places where...
 1. Ambient temperature exceeds 40°C or falls below 0°C.
 2. Under a flammable/explosive atmosphere or in a dusty/humid place.
 3. Under vibration or wind & rain.



Grounding



Prohibition



Electrical shock



Prohibition

Safety instructions

◀◀Operation▶▶

WARNING

- **Qualified operator only**

The pump must be operated/controlled by operator(s) who has trained in the safe operation of the pump.



- **Do not modify the pump**

Risk of electrical shock. We are not responsible for any accidents or damage due to modification.



- **For specified application only**

The use of the pump in any application other than those clearly specified may result in injury or damage. Use the pump in a specified condition.



- **Do not step on the pump**

Do not step on the pump. Do not use the pump in place of a footstool. You may fall down from the pump and be injured.



- **Pay attention to reciprocating motion (L, CX, AX pumps with a plunger)**

The plunger is reciprocating in the bracket. Do not enter the finger or other stuff in the bracket. Otherwise it may cause serious injury.



- **Before starting the pump**

Be sure there is no one around the pump before connecting power. The pump doesn't have operation switch. On connection of power, the pump starts to run.



- **Do not cover the pump with cloth**

The heat that stays in the pump can cause fire or failure. Provide adequate ventilation.



- **Before a long period (more than 1 years) of storage**

Drain liquid from the pump and clean the inside.



- **Use in a cold place**

When ambient temperature lowers below zero degrees Celsius, the pump may be broken by liquid freezing. Drain liquid from the pump and piping every time operation is completed.



- **Do not close a discharge or a suction valve during operation**

Operation with closed suction may cause malfunction of the pump. Operation with closed discharge may cause a sudden pressure rise in the pump and piping. This can break the pump and motor.



Safety instructions

《Others》

CAUTION

- **Countermeasure against efflux**

Take protective measures against the accidental efflux caused by the pump or piping breakage. Do not drain chemical directory onto the ground. Disposal of harmful liquid should be done in accordance with local laws.



- **If foreign matters enter the pump**

Turn off power and remove foreign matters. Operation with foreign matters can cause damage or failure.



- **Pump disposal**

Dispose of any used or damaged pump in accordance with local laws and regulations. Consult a licensed industrial waste products disposing company.



- **Keep labels clean**

Always keep nameplate & labels clear for identification. If they age or come off contact us for replacement.




- **Pump structure**

This pump is designed and manufactured according to Electricity Enterprises Law of Japan.




Outline

1. Unpacking & Inspection

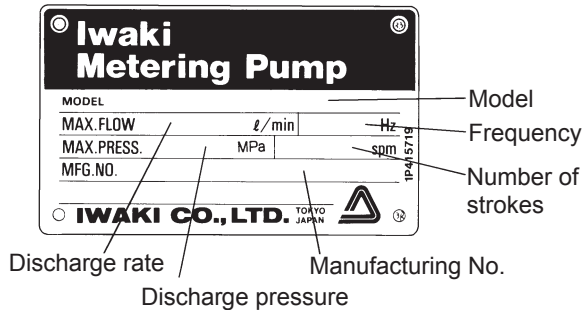


After unpacking the pump, check the following points to see if the product conforms to your order. If you find any problems, contact us or your nearest distributor.

1. Do the model, discharge pressure, stroke number, and other details on the nameplate correspond to your order?
2. Does the package contain the following accessories?
Air breather × 2
3. Is there no transit damage and no loose bolt/nut?



Air breather

2. Principle of Operation

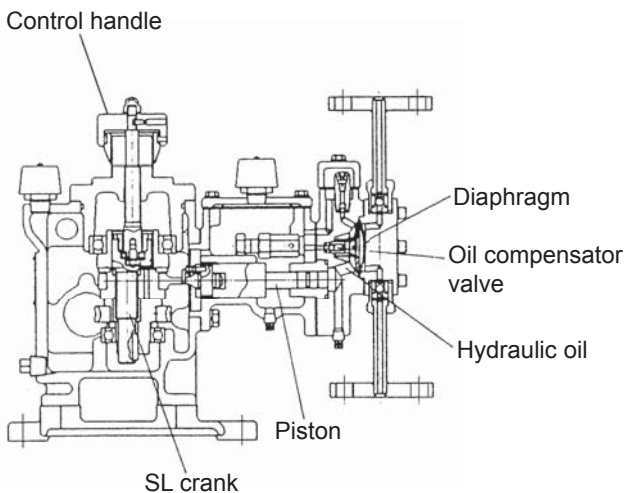

The IWAKI metering pump AX-series is designed for chemical processing.



This series has a driving unit that consists of the SL crank mechanism, a spherical diaphragm, and an oil compensator valve assembly.

Motor rotation is adjusted by the gear reducer and is converted to reciprocating motion by the SL crank mechanism. This reciprocating motion is transmitted by means of a piston to the diaphragm through hydraulic oil.

The discharge rate is adjusted by changing stroke length via the control handle.

Outline

3. Identification Codes

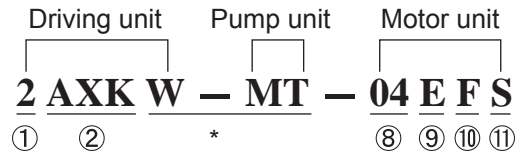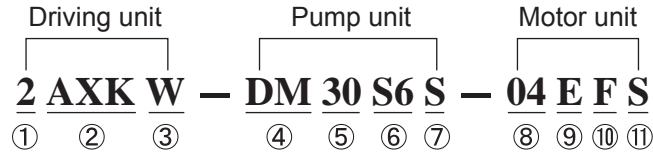

① Number of pump heads

No symbol: Single pump head

2: Multiple pump head

(Numerical code shows the number of parallel pump heads)

② Driving unit

Mode	Full Stroke Length	Standard Motor Output
AXJ	15mm	0.2 kW
AXK	24mm	0.4 kW
AXA	30mm	0.75kW
AXB	40mm	1.5 kW

③ Reducer

Reduction Code	Reduction Ratio	Stroke Rate (50/60Hz)
G	1/30	48/58spm
W	1/20	72/86spm
H	1/15	96/116spm
R	1/12	120/-spm (50Hz only)

④ Pump head type

Code	Pump Head Type
DM	Medium pressure single hydraulic diaphragm
WM	Medium pressure double hydraulic diaphragm

⑤ Piston diameter: The figures represent the piston diameter in mm.

⑥ Material code

Code	Main wet end materials
S6	SUS316 or SCS14

Outline

⑦ Wet end materials (Make to order)

N: For nuclear power (special control on material)

V: For viscous liquid or slurry (except the D3 size pump head)

S: Non-standard material

Special valves

Diaphragm rupture detector

Special pump head and hydraulic unit

⑧ Motor output

Code	Output
02	0.2 kW
04	0.4 kW
07	0.75kW
15	1.5 kW
22	2.2 kW

⑨ Stroke length adjustment

Code	Stroke Adjustment Type
Without code	Manual
E	Electric servo
A	Air servo (with A-A positioner)
D	Air servo (with E-A positioner)

⑩ RPM control

Code	RPM Control
Without symbol	Fixed rpm
F	Inverter motor
V	VS motor

⑪ Motor unit

S: Special base

Pulse generator

Customized gear and motor unit

*Multiple application code between different pump types

W-MT	The same driving unit but different pump heads
-MT	Different driving units or different reduction ratios.

NOTE: If pumps have different driving units, the largest driving unit code is indicated in ②.

Outline

4. Specifications

■ Standard specifications (Single application)

Model	Piston Diameter	Stroke Length	Discharge rate ℓ/min (at spm)							Max discharge pressure (MPa) {kgf/cm ² }	Standard Motor (kW)
			50Hz Stroke rate (spm)				60Hz Stroke rate (spm)				
			G:48	W:72	H:96	R:120	G:58	W:86	H:116		
AXJ-	11	0-15	0.054	0.082	0.109	0.136	0.065	0.098	0.131	5.0 {50}	0.2
	15		0.108	0.162	0.216	0.270	0.129	0.194	0.259		
	22		0.246	0.369	0.492	0.615	0.295	0.443	0.591	2.5 {25}	
	30		0.468	0.702	0.936	1.17	0.561	0.842	1.12	1.3 {13}	
AXK-	22	0-24	0.385	0.578	0.771	0.964	0.464	0.697	0.930	3.8 {38}	0.4/0.2
	30		0.733	1.10	1.46	1.83	0.883	1.32	1.76	2.0 {20}	
AXA-	30	0-30	0.916	1.37	1.83	2.29*	1.10	1.65	22.0*	4.2 {42}	0.75/0.4
	42		1.79	2.69	3.59	4.49*	2.16	3.24	4.33*	2.1 {21}	
	52		2.75	4.13	5.50	6.88*	3.31	4.98	6.64*	1.4 {14}	
AXB-	42	0-40	2.39	3.59	4.79	5.98	2.88	4.33	5.77	4.2 {42}	2.2/1.5/0.75
	52		3.67	5.50	7.34	9.18	4.42	6.64	8.85	2.7 {27}	
	65		6.27	9.41	12.5	15.6	7.56	11.3	15.1	1.6 {16}	

Discharge rate is based on the pumping with clean water at normal temperature and the maximum discharge pressure.

NOTE: The maximum discharge pressure of each type marked with * is lower than the value shown in the table.

■ Common specifications

1. Wet end materials

Material code	S6		
Pump head size	D3,15,25	D90	D170
Pump head	SUS316	SCS14	
Valve	HC		SUS316
Valve seat	SUS316		
Gasket	PTFE		
Diaphragm			

SUS316 : Stainless steel (18Cr-12Ni)

SCS14 : Stainless steel casting (equivalent to SUS316)

HC : Hastelloy C276

PTEE : Polytetrafluoroethylene

2. Liquid temperature range: 0-100 deg.C


3. Ambient temperature : 0-40 deg.C

4. Standard motor : Flange mounting (IEC Standard) Others : Coupling connection on the base

NOTE: Specifications and dimensions are subject to change without notice for product improvement.

Outline

■ Product line-up

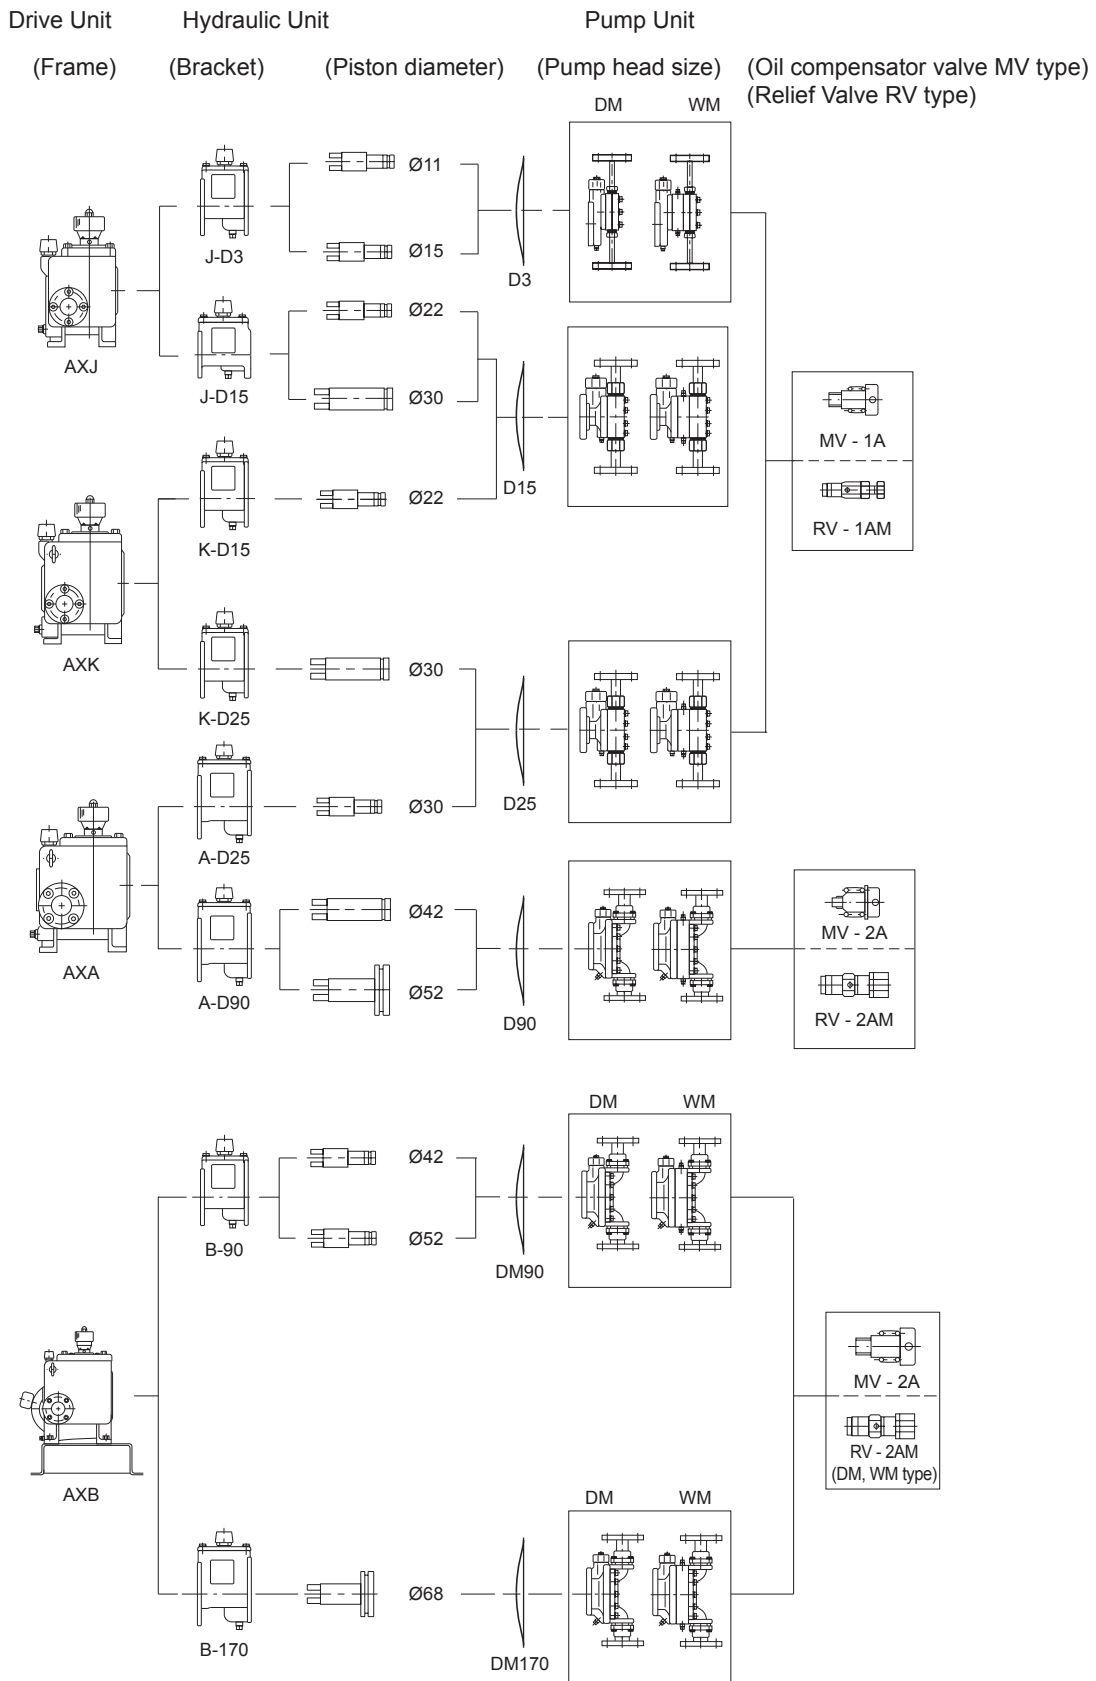

5. Pump mechanism & Precautions


■ Components

1. Reduction mechanism

The motor speed is reduced by a worm and a worm wheel. The standard reduction ratios are 1:30, 1:20, 1:15, and 1:12 (for 50Hz only).

2. SL crank mechanism

The SL crank mechanism is designed to adjust the stroke length and consists of an eccentric disc and SL crank (Both the components have the same eccentricity), and coupling disc.

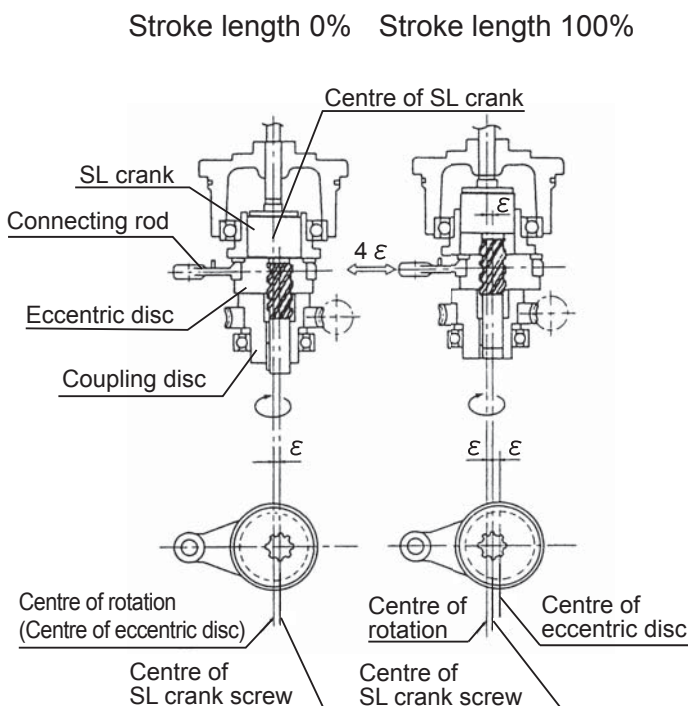

<Principle of SL crank mechanism>

- When stroke length is set to 100% (SL crank is pulled up), the eccentric disc starts rotation around the SL crank screw. At this moment, the rotation of eccentric disc shifts away from the centre of SL crank and stroke length reaches the double of the eccentricity degree at longest. (The left diagram shows that the eccentric disc has rotated 180° and the eccentricity degree is 2ε.)
- When stroke length is set to 0% (SL crank is pushed down), the centre of the eccentric disc is aligned with the centre of SL crank. The eccentricity degree ε between the SL crank and the centre of eccentric disc is offset and eccentricity degree stays 0.

3. Stroke length control


To increase or decrease the discharge rate, change stroke length by rotating the control handle.

4. Diaphragm

The diaphragm (IWAKI's original design) is hemispherical shape and its shape variation is utilized to make pumping action. The hemispherical shape relieved the diaphragm from tensile stress and extended its life.

Outline


5. Oil compensator valve

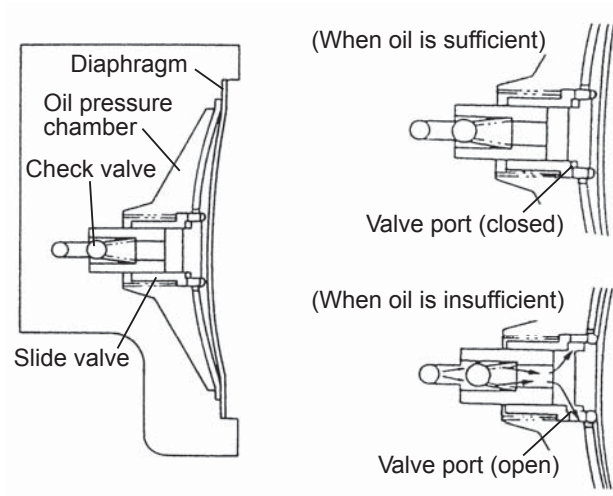

The oil compensator valve unit consists of a slide valve and a check valve. When the oil is insufficient, those two valves operate and feed oil automatically into the oil pressure chamber to keep the required oil level. Oil is supplied as the diaphragm pushes the slide valve to open the valve port.

6. Automatic air vent valve

For the prevention of air lock, this valve functions to automatically expel the air produced in the hydraulic oil while the pump is in operation so as to maintain metering precision.

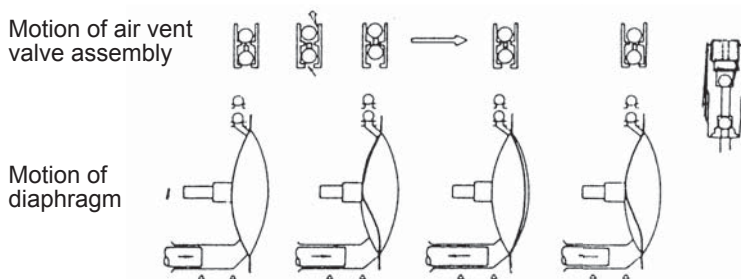

This valve assembly comprises two-stage ball valves provided with the upper and lower sealed surfaces. In brief moments during a discharge stroke, when the ball valves move from the lower sealed surface to the upper one, the air remaining in the oil pressure chamber is expelled together with a very small amount of oil.

7. Air breathers

They control pressure fluctuation in the driving unit and hydraulic unit. If plugs are not changed to air breathers at oil replacement, the air cannot be expelled and an appropriate amount of oil cannot be filled. (See "6. Before Installation" Item 6 on page 15.)

8. Relief valve

The relief valve functions when the pressure in the hydraulic unit rises above a set level in order to prevent the damage to the diaphragm & the driving unit and the overload to the motor.

Outline

■ Precautions

1. Prohibition on shutoff operation

Make sure to open all related valves on both the discharge & suction side piping before operation. Do not throttle or close any valves while the pump is in operation.

2. Influence by temperature change

Liquid character changes in viscosity, steam pressure, corrosion resistance or other factors as the temperature varies. Pay close attention to liquid character change.

▶ Allowable liquid temperature range is from 0 to 100 deg.C.

NOTE: When high-temperature liquid (about 100 deg.C) is transferred under heat cycle, creep phenomenon can reduce the seal performance on the diaphragm. Periodically tighten the bolts on the pump head (See page 31).

NOTE: Refer to the corrosion resistance table for the allowable liquid temperature range. If you have any questions contact us or your nearest distributor.

▶ Allowable operating ambient temperature range is from 0 to 40 deg.C.

3. Effect of viscosity on performance

Discharge rate reduces when the pump transfers viscous liquid instead of clean water. Secure a constant flow by keeping the viscosity change minimum. NPSHr increases as viscosity becomes greater. Increase NPSHa at an adequate level when pumping a viscous liquid.


4. Handling of slurry

- ① Note that a metering accuracy is less than clean water.
- ② When slurry is pumped at a low stroke length, slurry precipitates in the pump head valves and the valves are stuck.
- ③ The life of diaphragm becomes shorter due to the abrasive character of slurry.

Installation

6. Before Installation

■ Recommended piping

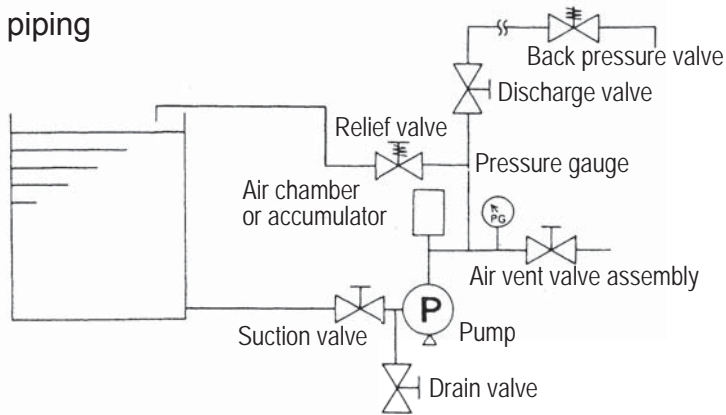

The piping system should be designed to fully meet the suction and discharge requirements. Study piping layout thoroughly when handling slurry solution.


■ Installation location

1. Position the pump as close to the supply tank as possible and below the lowest possible liquid level in the tank. In addition, try to arrange the suction piping as short as possible.
2. For ease of maintenance, keep enough space around the pump. Take measures to protect the motor and power distribution equipment in a time of disasters such as a flood.
3. The pump should be installed in a flat area where is free form the vibration caused by other machines.

■ Foundation work

1. A concrete foundation on the soft ground can cause settlement or inclination. Have the foundation wide enough to bear the weight of pump and thick enough to prevent the damage by freezing in winter.
2. Wait until the concrete foundation is fully set. Drill the foundation for foundation bolts on the drawing or the base. Level the floor surface as much as possible.

■ Installation

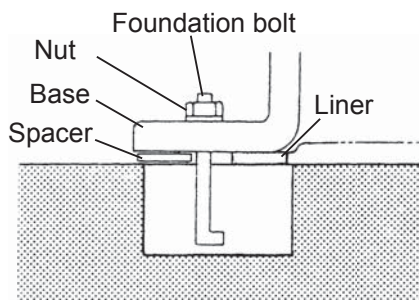


Remove the liner before tightening the nut.


1. After the foundation work is completed, place the pump on the concrete foundation. Do not lift up the pump by holding the motor, otherwise abnormal motor noise or motor damage may result. Always use eye bolts on the flange motor type or the base holes on the motor coupling type to lift up the pump for the placement.
2. Insert the liner in between the pump base and the concrete foundation to make a space for mortar grouting. The liner should be inserted evenly to keep the pump horizontally.
3. Screw a nut in the foundation bolt until the bolt top-end comes out from the nut. And place it in the drilled hole through the base as the left figure shows.

Installation

4. Fill the foundation bolt hole with mortar and leave it for a few days until it hardens.
Check mortar level comes up to the foundation concrete surface. Use the level to see levelness.
5. After the mortar has hardened, remove the liner and check the pump is horizontally-emplaced. Then tighten the nut of the foundation bolt. If the pump is not level, insert a spacer under the bottom of the base to keep levelness.
6. Remove the plugs on the driving and hydraulic units. Apply sealing tape to the thread of the air breathers and then screw them in. Turn hexagonal nuts with a wrench to mount air breathers.

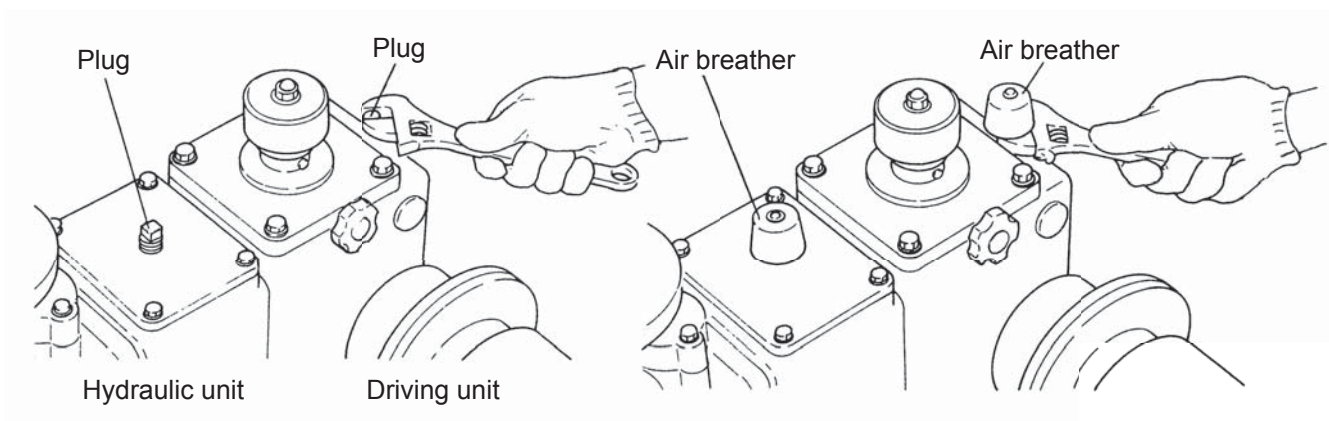

7. For the motor coupling type, centre the coupling parts.
The deviation should be 0.1mm or less for the 0.2, 0.4, 0.75kW motor (0.2mm or less for the 1.5, 2.2, 3.7, 5.5, 7.5kW motor).

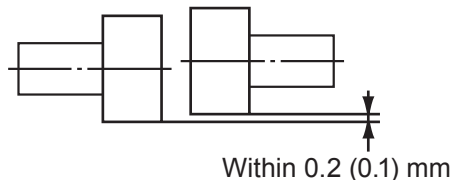

■ Piping precautions

1. Have the piping short as much as possible with the minimum number of bends. Do not allow any projections where the air may be trapped.
2. Provide pipe supports so that the piping weight does not totally weigh the pump.
3. If the pump is used to transfer a high or low-temperature liquid, install the flexible piping to protect the pump from the expansion and contraction of piping by thermal stress.
4. Do not make U-shaped section on piping if sedimentary slurry is to be transferred. In this case, provide a drain plug in the lower most section of the piping.
5. If a viscous, toxic, or sticky liquid is to be transferred, provide a flushing system to facilitate maintenance and inspection.
6. Select the piping material, taking account of the corrosion resistance to liquid and the pressure to piping.
7. Clean the inside of pipes before installation. Blind covers are provided at the inlet and outlet of the pump to prevent foreign matters from entering. Remove them and then connect pipes.
8. If there is a risk of the liquid freezing in piping, keep the piping warm. Equip the suction piping with a drain cock to drain liquid.

Installation

■ Suction piping


1. Arrange a suction pipe bore, taking account of NPSH (normally it should be wider than pump inlet).
2. Set suction piping in the flooded suction system at any liquid level. The pump is not capable of self priming depending on service conditions. Contact us for detail.
3. Secure tight joint connections so as not to suck the air. If the air enters the suction piping, discharge rate becomes unstable.
4. Install the strainer (about 40 mesh) for the prevention of foreign matter interfusion.

■ Discharge piping

1. The pump has a built-in relief valve in the hydraulic chamber for the protection of the pump. For the protection of the piping, be sure to install a relief valve on the discharge piping near the pump. The relief valve should be positioned in between the pump and discharge valve.
2. The withstand pressure of the discharge piping must be greater than the set pressure of the relief valve. Secure tight joint connection.
3. We recommend mounting an accumulator or an air chamber to reduce pulsation and inertia resistance.
4. We recommend mounting a back pressure valve so as to prevent overfeed as a result of insufficient differential pressure.
5. Install a pressure gauge for routine checks of discharge pressure. If the bourdon pressure gauge is used, install a shut valve.
6. Do not branch a discharge pipe to make 2-point injection. Each discharge rate can not be controlled.

■ Wiring

Wiring work should be done with suitable wiring instruments in accordance with the technical standards for electric installation and the indoor wiring regulations. Observe the following points.

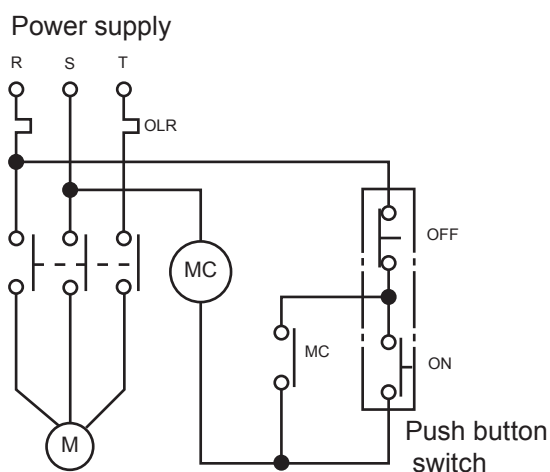


- M ······ Motor
- MC ······ Electromagnetic switches
- ON ······ } Push button switches
- OFF ······ }
- OLR ······ Overload relay

1. Use an electromagnetic switch suitable for the motor of the pump.
2. If the pump is used out of doors, wiring should not be exposed to rainwater and so on.
3. The electromagnetic switch and push button switches must be installed securely away from the pump.
4. Arrange wiring so that the motor rotates in the direction indicated by the arrow on the plate (clockwise rotation viewed from the fan cover side of the motor). Always confirm the rotation direction after setting the stroke rate at 0%.
5. Install an ampere meter to monitor the pump operation.

Operation

7. Before Operation

■ Stroke length adjustment

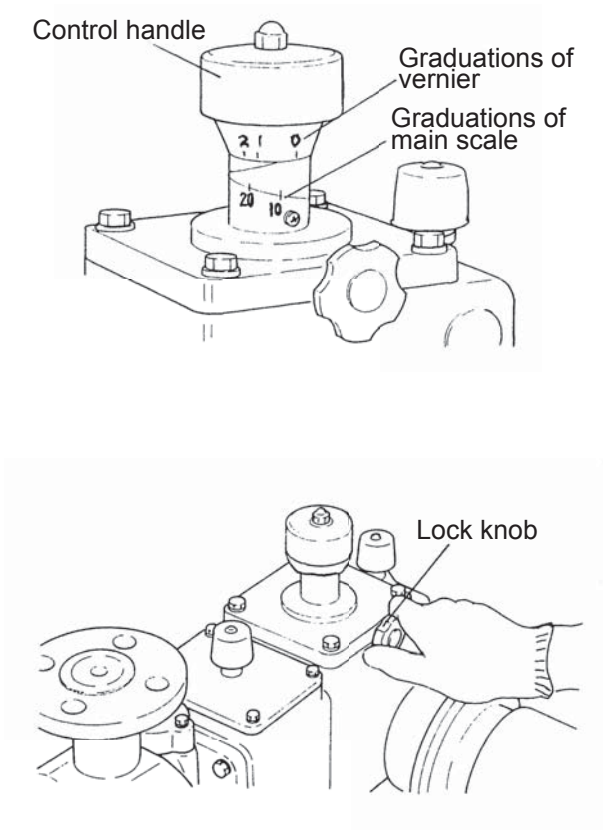

<Manual Operation>

A dial-type control handle is used to adjust the stroke. Adjustment is possible at any time during operation or stop, but it is preferable to make it while the pump is in operation. Do not rotate the control handle beyond 0 - 100 % otherwise the drive unit can break.


- ▶ Clockwise rotation decreases the stroke length and the flow.
- ▶ Counter clockwise rotation increases the stroke length and the flow.

1. Refer to the "Performance curve" or "Pump test report" for a suitable stroke length. The graduations show stroke length in %.
2. Loosen the lock knob. (The control handle is now usable.)
3. Set stroke length. The total figure of the main scale and the vernier shows stroke length in %.
4. After setting the stroke length, tighten the lock knob firmly. Confirm that it is secured and does not move.

<Electric servo or air servo operation>

Refer to the electric/air servo instruction manual.

■ Precheck

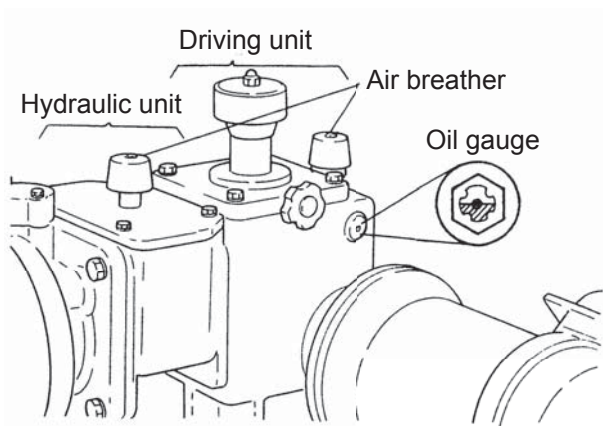

Check the following points after installation.

1. If there is any damage, loose bolt, or oil leakage.
2. If the air breathers on the driving and hydraulic units are mounted instead of the plugs (See Item 6 of "6. Before installation".).
3. If oil level in the driving and hydraulic units is at the red label on the oil gauge.
4. If other related devices for pump operation, liquid, and power supply are ready.

Operation

■ Operation procedure

Follow the procedure below to initiate pump operation.

No.	Procedure	Points to be checked
1	○ Open related discharge and suction valves.	
2	○ Set stroke length to 0%.	
3	○ Turn on the motor to run the pump.	● Check that motor rotates in a clockwise rotation when viewed from the fan cover side of motor.
4	○ Run the pump with 0% stroke length for 10 minutes for running-in. Check that there is no abnormality during the running-in.	● In cold weather, overcurrent may take place right after start-up. This phenomenon is due to low oil temperature in pump. If this happens, keep the pump running with unloaded condition in order to raise oil temperature.
5	○ Eliminate the air out of the pump. ○ Open the air vent valve on discharge piping to release the air with liquid, or increase stroke length gradually under no-load running.	● For the AXJ-11 and 15, eliminate the air by opening the air vent valve.
6	○ Release discharge-side pressure by the air vent piping and then break in the pump with 100% stroke length for approximately 10 minutes.	
7	○ If there is no problem in break-in operation, close the air vent valve gradually to make a full operation.	● Do not allow the discharge pressure to exceed the maximum pressure level or amperage to exceed the rating during operation (Refer to the nameplates). Also make a visual inspection to check there is no problem on each pump components.
8	[Checking of discharge rate] ○ Check the flow per shot under actual working conditions by using a gauge such as measuring cylinder. (The pump is ready if each shot is constant and the discharge linearity to stroke length is maintained.) ○ Make a graph that shows the relation between the flow and stroke length on the actual service condition in order to set discharge rate.	● After changing stroke length to adjust the flow, wait for one minute and then measure the discharge rate. ● The pump test result is presented at order phase if requested. The information is based on the pumping with clear water at normal temperature (not on actual liquid or through actual piping).

Operation

■ Precautions in operation

No.	Precautions	Remarks
1	○ Be sure to open all related valves on both suction and discharge side piping before starting the pump.	
2	○ Do not rotate the motor in reverse.	● Confirm that motor rotates clockwise when viewed from fan cover side.
3	○ Do not change the preset pressure of the relief valve since operating pressure is set previously according to specified operating condition.	● If the specified operating condition is greatly changed, contact us.
4	○ Regularly feed the air to the air chamber. See manufacturer's instruction manual for the detail information of the air chamber.	<ul style="list-style-type: none"> ● Because liquid and air come directly in contact with each other in the air chamber, a small amount of compressed air is absorbed into the liquid. ● The air chamber can not operate properly as time goes by because the air keeps decreasing. Supply the air periodically.

■ Resumption after stoppage

1. When operation is resumed after a short period of stoppage (within a week), the pump can run at any stroke length.
2. If the pump is started after a long period of stoppage (more than one week), set stroke length to 0% and run the pump under unloaded condition for 10 minutes. Then increase the stroke length gradually to start normal operation.
3. Before stopping the pump in winter, open the drain valve and run the pump dry to eliminate liquid from the pump and piping for the prevention of liquid freezing. When suspending operation just for a short period of time, temporarily use the band heater to keep the liquid in the pump head warm.

Maintenance

8. Maintenance & Inspection

■ Daily inspection

No.	Point to be checked	How to check
1	<ul style="list-style-type: none"> • Is the pump running smoothly? 	<ul style="list-style-type: none"> • Check the flow meter or visual inspection. • Motor amperage
2	<ul style="list-style-type: none"> • Is there any change in the flow or discharge pressure? 	<ul style="list-style-type: none"> • Check the flow meter, pressure gauge or the like. • Check the flow and the pressure gauge with nameplate.
3	<ul style="list-style-type: none"> • Is there any leakage from wet end parts? 	<ul style="list-style-type: none"> • Check the sealed parts.
4	<ul style="list-style-type: none"> • Is oil in gear reducer and hydraulic/driving units are at required level? • Is there oil leak or oil deterioration? 	<ul style="list-style-type: none"> • Check the oil gauge. • Visual inspection

■ Periodical inspection

If there is a spare pump on piping, run and maintain the spare pump from time to time to make it ready to use.

No.	Point to be checked	Remarks
1	<ul style="list-style-type: none"> • Check discharge & suction valves on the pump head. ▶ Every 6 months 	<ul style="list-style-type: none"> • If the valves are scratched or worn, replace them. • Follow the instructions in "Disassembly & Assembly" section for replacement.
2	<ul style="list-style-type: none"> • Check the diaphragm. ▶ Inspect it every 6 months. 	<ul style="list-style-type: none"> • Diaphragm is one of the wear parts and its life depends on working conditions. Check the diaphragm every six months and replace as necessary. Follow the instructions in "Disassembly & Assembly" section for replacement.
3	<p>Change the oil in driving and hydraulic units.</p> <ul style="list-style-type: none"> ▶ Replace oil at least once a year ▶ Quantity and brand of oil • Make sure to fill oil up to red label on oil gauge (middle position). 	<ul style="list-style-type: none"> • When run the pump for the first time, replace oil after 500 hours. This is because initial wear is generated. If oil is contaminated after 2,000 to 3,000 hours operation, replace oil.
4	<ul style="list-style-type: none"> • Check if the pump head is secured by tightening bolts. 	<ul style="list-style-type: none"> • Tighten the bolts if they are loose. • See the items 11 and 13 of "10. Disassembly & Assembly" when tightening bolts.

Maintenance

■ Required oil level (Reference value)

Pump model Drive unit - Piston diameter	Head size	Amount of oil
AXJ —	11	1.4
	15	
	22	
	30	
AXK —	22	2.2
	30	
AXA —	30	3.9
	42	4.2
	52	
AXB —	42	9.7
	52	
	68	

The amount of oil on the table is total oil in the driving and the hydraulic units.

■ Suitable oil brands

Company	Product name
Idemitsu Kosan	Apolloil ATF D-2
Showa Shell Sekiyu	Gelco ATF
Nihon Sekiyu	PAN ATF Amenity
Mitsubishi Sekiyu	Diamond ATF II
Cosmo Sekiyu	Cosmorio ATX
Esso Sekiyu	Esso ATF
Mobil Sekiyu	Mobil ATF200
Kignus Sekiyu	Burn ATF-K
Kyodo Sekiyu	Kyoseki 21 ATF Special
*Nihon Sun Sekiyu	Sunoco ATF (NOTE)



Iwaki uses the oil marked with *.

NOTE: Sunoco ATF was formerly called Sunoco Transmatic Fluid DEXRON II-D.

■ Oil change procedure


The oil in both the driving unit and the hydraulic unit can be changed at the same time as they are connected.

1. Stop the pump and release the pressure by opening the drain valve on the piping.
2. Remove the drain plugs on the cylinder head, the bracket, and the driving unit for drainage.

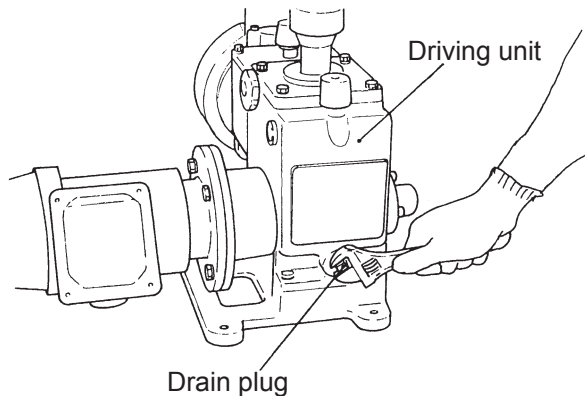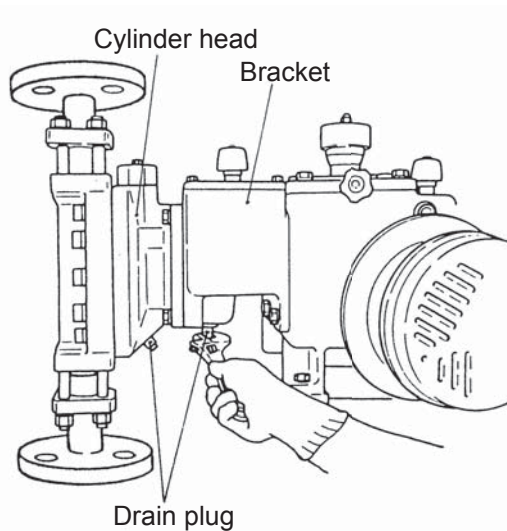


Maintenance

- Remove the bracket cover and the air vent cover. Then use a wrench to remove the relief valve and the automatic air vent valve assembly. The relief nut (151) of the relief valve should not be loosened. Remove them as a unit.

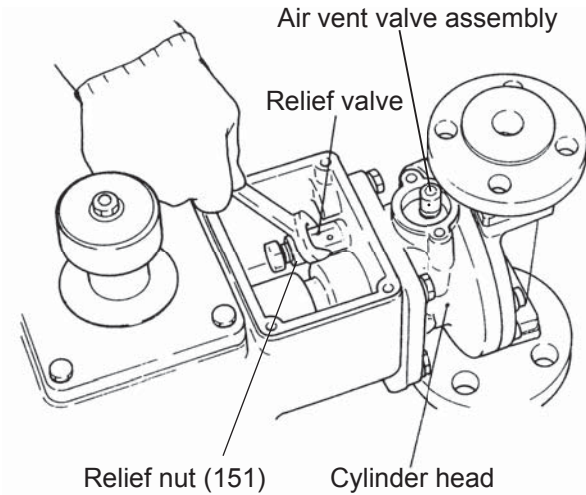

Name	Nominal wrench size
Relief valve (RV-1AM)	17
Relief valve (RV-2AM)	24
Air vent valve assembly	13

- Flush the inside with new oil.
- Wind sealing tape around the drain plugs and attach them to the bracket, cylinder head and driving unit.
- Set the stroke at 0%.
- Slowly pour suitable oil into the bracket, taking care not to generate foam. Fill oil up to the mid-level of the oil gauge on the driving unit and leave it for five minutes. See the "Suitable oil brands" item.
Note that if the plug on the driving unit is not replaced by the air breather provided, oil cannot flow into the driving unit via the connecting hole. See Item 6 of "Before Installation".

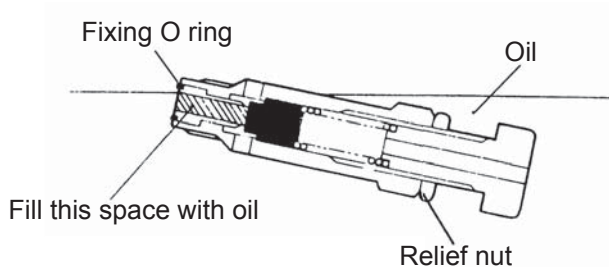


- Prepare the relief valve.
Fit O ring to the relief valve and then fill the top-end space of the relief valve with oil. Then tighten the relief valve with a wrench until it reaches the innermost.
- Fit O ring to the automatic air vent valve assembly. And then tighten the assy with a wrench until it reaches the innermost.

- All the steps for oil change have now been completed, however, the air elimination operation is needed to expel the air from the automatic air vent valve assembly. For the air elimination operation, see the "Adjustment of hydraulic oil level" on page 33.

Maintenance

■ Inspection and replacement of the insert chamber liquid (Double diaphragm type)

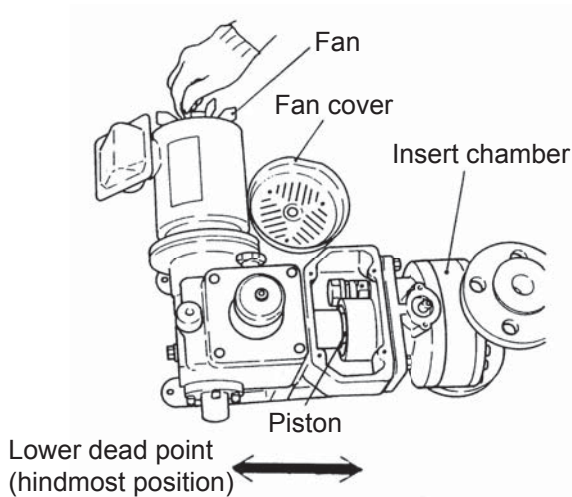

Generally, the enclosed liquid in the insert chamber needs not be checked or changed. In case of changing the enclosed liquid, take the following steps without removing the pump head and the first diaphragm.

WARNING

Be sure to turn off the main power so that the pump and related devices are stopped. If the motor is turned on the motor fan starts to rotate and result in serious injury.

1. First, stop the pump. Release the pressure from the pump head and set the stroke to 100%.
2. Detach the drain plug from the bracket and release oil.
3. Remove the motor fan cover and turn the fan by hand, or remove the motor and rotate the coupling by hand to bring the piston to lower dead centre (its hindmost position).
4. Remove upper & lower drain plugs on the insert chamber and release the enclosed liquid.
5. Apply sealing tape to the lower drain plug and screw it into the insert chamber.
6. Pour the liquid into the upper drain plug hole to fill the insert chamber. Wait five minutes to see if liquid level reduces or not. Replenish the liquid as necessary.
7. Apply sealing tape to the upper drain plug and screw it into the insert chamber.
8. Attach the drain plug to the bracket and pour a specified amount of oil into the hydraulic unit. See "Required oil level" on page 21.
9. Run the pump for five minutes.

For the replacement of the piston O ring & the diaphragm, or the dismantlement of the pump head, follow the instructions in "10. Disassembly & Assembly".

Maintenance

9. Troubleshooting

Problem	Motor does not run.	Discharge rate is too low or too high.	Discharge rate is unstable.	Excessive motor amperage	Liquid is not transferred.	Discharge pressure is low.	Liquid leak	Abnormal vibrations and/or noise	Oil leak	High temperature of driving unit	Remedy
Cause											
Motor is out of order.	<input type="checkbox"/>			<input type="checkbox"/>							Replace as necessary
Breakage or improper connection.	<input type="checkbox"/>			<input type="checkbox"/>							Connect or replace wire.
Blowout	<input type="checkbox"/>			<input type="checkbox"/>							Determine and solve the root cause.
Voltage is too low.	<input type="checkbox"/>			<input type="checkbox"/>							Determine and solve the root cause.
Insufficient NPSH (due to cavitation)		<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>			<input type="checkbox"/>			Review suction requirements.
Worn valve seat		<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>					Replace as necessary.
Foreign matters block the valve.		<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>						Disassembly and cleaning.
Suction piping (the strainer) is blocked.		<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>						Disassembly and cleaning.
The measure of stroke length is upset.		<input type="checkbox"/>									Readjustment.
Overfeeding due to insufficient differential pressure.		<input type="checkbox"/>	<input type="checkbox"/>								Increase the differential pressure.
Stroke rate fluctuates.			<input type="checkbox"/>								Examine power source, motor and gear reducer.
Overload (excessive discharge pressure)				<input type="checkbox"/>					<input type="checkbox"/>		Examine discharge piping system.
Improper power supply				<input type="checkbox"/>							Examine power source.
The air is entrained from suction side piping.		<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>						Inspect and adjust piping.
Use of unspecified liquid		<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>			<input type="checkbox"/>			Review pump specifications.
Pressure gauge is out of order.						<input type="checkbox"/>					Replace as necessary.
Pressure gauge is blocked.						<input type="checkbox"/>					Clean as necessary.
Leak from the safety valve.		<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>					Reset the set pressure of safety valve.
Improper lubricating oil in driving unit.				<input type="checkbox"/>				<input type="checkbox"/>		<input type="checkbox"/>	Check oil level, oil type and cleanliness.
Defective Oil seal/O ring									<input type="checkbox"/>		Replace as necessary.
Defective valve gasket or fitting gasket		<input type="checkbox"/>					<input type="checkbox"/>				Replace as necessary.
Improper level of enclosed liquid (only for WM models)		<input type="checkbox"/>		<input type="checkbox"/>			<input type="checkbox"/>				Check and refill the liquid.
Diaphragm deformation.		<input type="checkbox"/>			<input type="checkbox"/>						Replace as necessary.
Oil leaks from the relief valve.		<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>						Repair or replace as necessary.
Malfunction of oil compensator valve assy.		<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>					Repair or replace as necessary.
The air is not fully eliminated from hydraulic unit.		<input type="checkbox"/>	<input type="checkbox"/>								Eliminate the air.
Malfunction of automatic air vent mechanism.		<input type="checkbox"/>	<input type="checkbox"/>								Disassembly, cleaning, or replacement
Improper tightening torque of pump head mounting bolts.		<input type="checkbox"/>	<input type="checkbox"/>				<input type="checkbox"/>		<input type="checkbox"/>		Retighten the bolts by specified torque.

Maintenance

10. Disassembly & Assembly

Refer to the "12. Exploded View" for dismantlement, assembly, and adjustment. Do not dismantle the driving unit because the driving unit is already adjusted in the manufacturing phase.

CAUTION


Some chemicals are harmful to eyes or skins. Always use protective clothing such as protective goggles and gloves during dismantlement and assembly.

■ Disassembly


1. Drain the liquid out of the suction and discharge-side pipes. Close valves and then remove the pipes from pump, taking care not to spill liquid.
2. Remove suction & discharge-side flanges in order to remove the pump head valves. If unusual scratches or abrasions are detected on any parts, replace them. Pay attention to harmful liquid. Harmful liquid can spill out of the pump chamber and the valve set, causing injury or damage to component parts.

Pump head size	SUS type
D3 • D15 • D25	Detach valve caps.
D90 • D170	Remove the mounting bolts on the retaining flange.

D3 • D15 • D25 Type

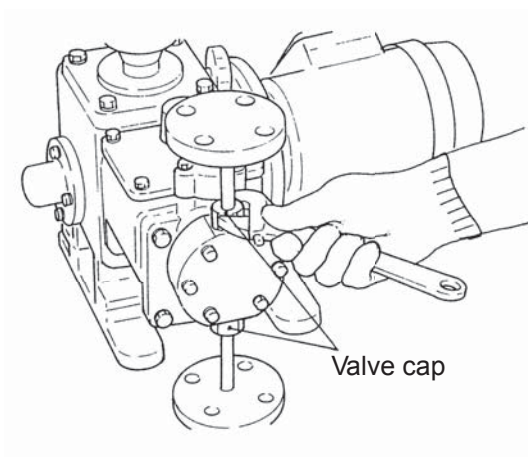


D90 • D170 Type

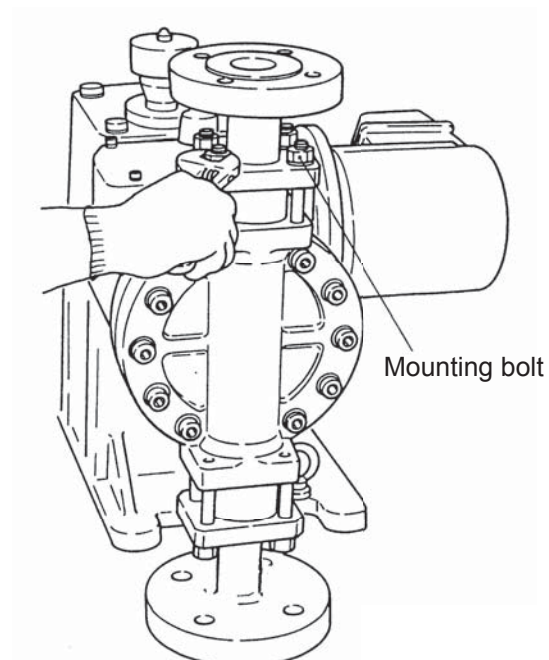


Maintenance

- Place a container under the drain plug for oil collection. Then remove the drain plugs on the cylinder head & bracket to drain oil.

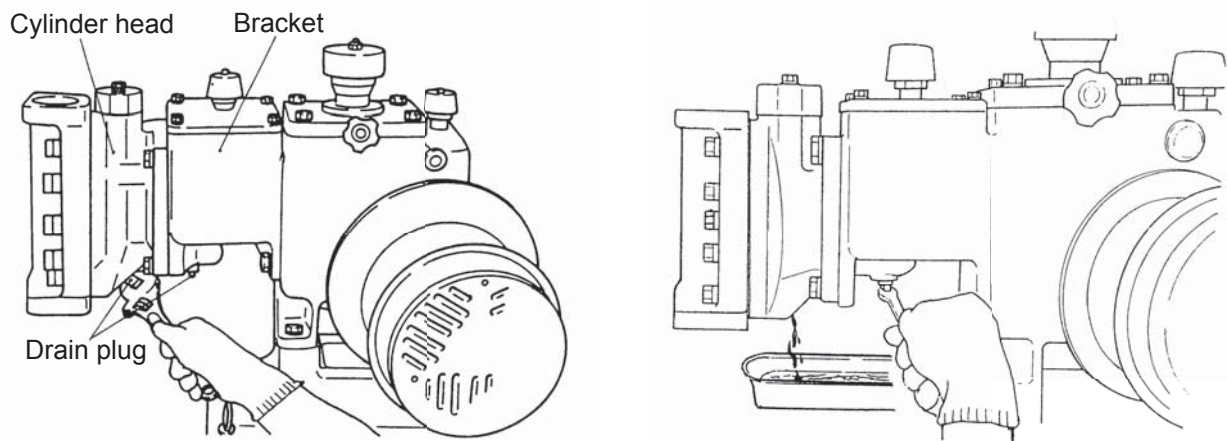

- (This item should be applied to the double diaphragm type <WM type> only.)


Place a container under the insert chamber to collect liquid. Remove the upper & lower drain plugs on the insert chamber and drain the enclosed liquid.

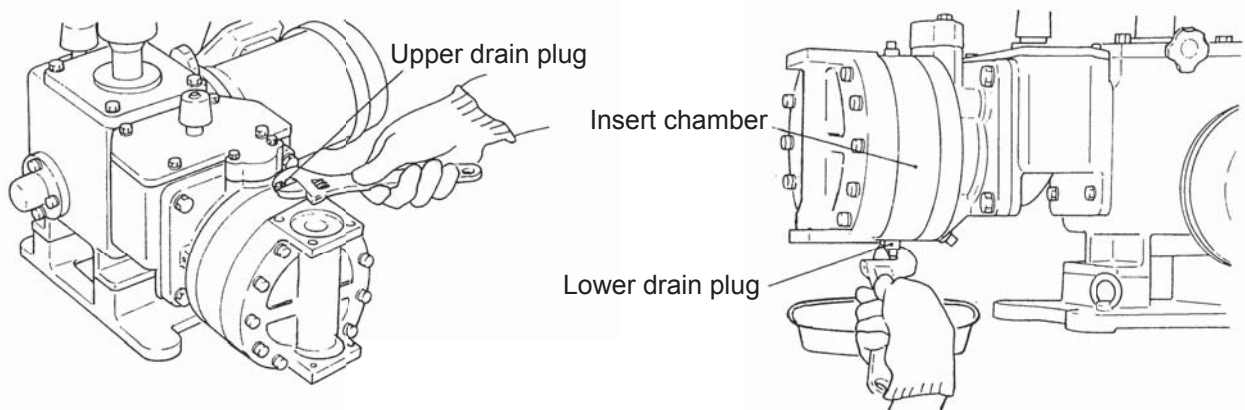

- Instructions marked with * are for WM models only but not for DM models.



- Loosen the mounting bolts (16) on the pump head and detach the pump head (1).

- Take care so as not to damage the diaphragm sealing surface on the pump head.

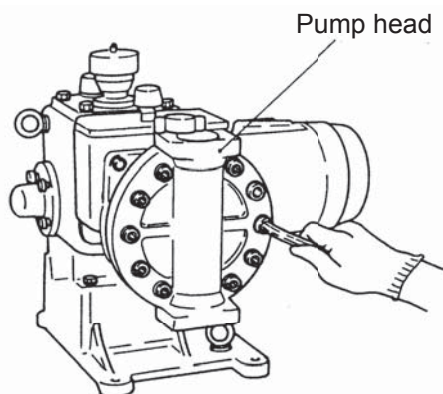

Maintenance


6. Remove the diaphragm (the front diaphragm of the WM models) (111). Be careful not to damage it. If scratches or other abnormalities are found on the diaphragm, replace with new one.

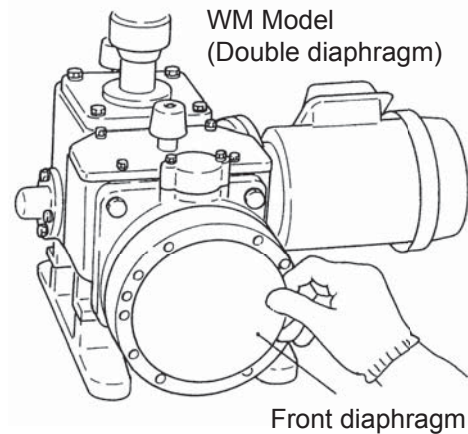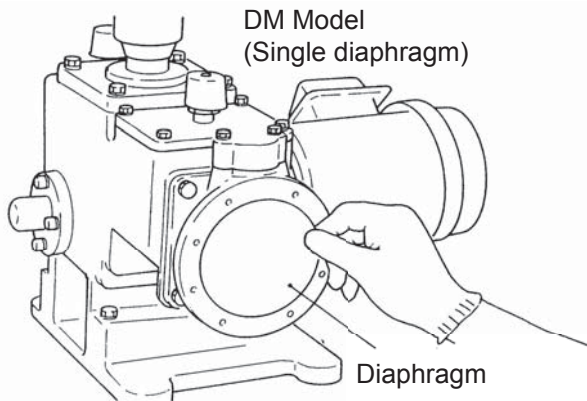


- *7. For WM model, loosen the mounting bolts (115) and remove the insert chamber (114) after removing the front diaphragm.

- *8. Remove the rear diaphragm (111). Be careful not to damage it.

- Instructions marked with * are for WM models only but not for DM models.

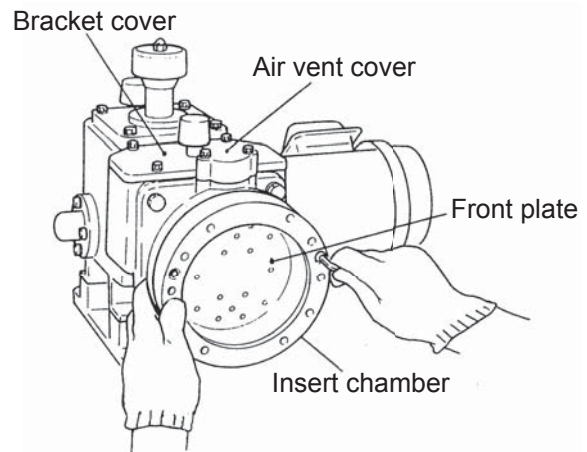

9. Remove the bracket cover (162) and the air vent cover (134). Use a wrench to remove the relief valve and the automatic air vent valve assembly.

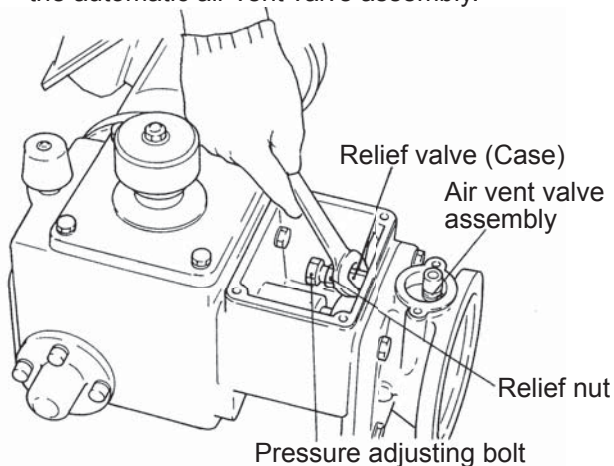


For the removal of the relief valve, hold and loosen the case (144) with a spanner and detach it as a unit. Do not loosen the relief nut and pressure adjusting bolt (the cap for AXA-42, 52 and AXB-42, 52, 68).

For the nominal wrench size, see Item 3 "Oil change procedure" on page 22.

Maintenance

10. Remove the cylinder head (101). Do not remove the oil compensator valve from the cylinder head.

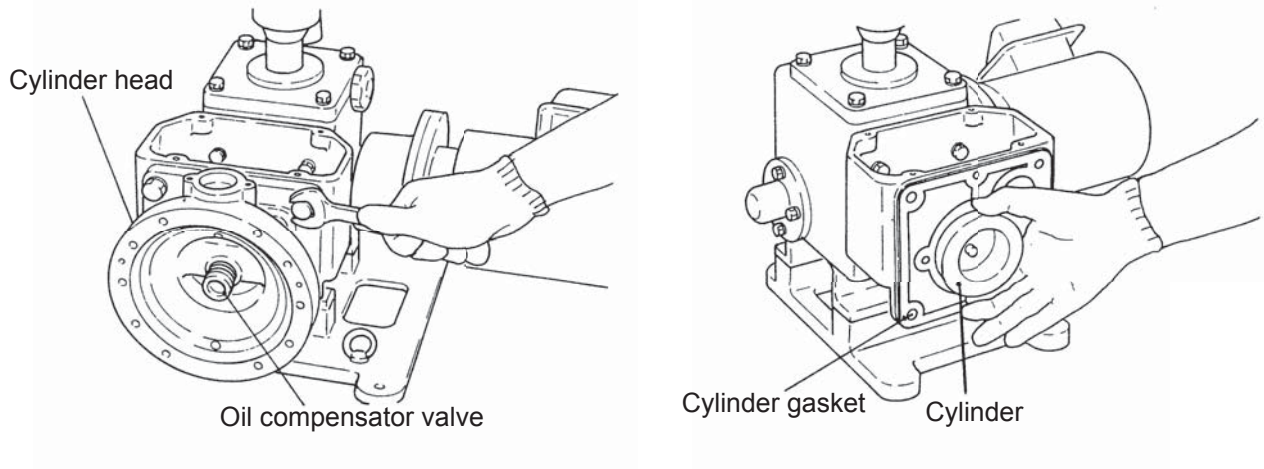


11. Remove the cylinder and the cylinder gasket. Pull out the cylinder while rotating it. Take care not to scratch the sliding surface of the piston.

12. **For the AXA-52 and AXB-68**

Remove the piston (117).

Check the piston O ring and replace it if it is damaged or worn out.

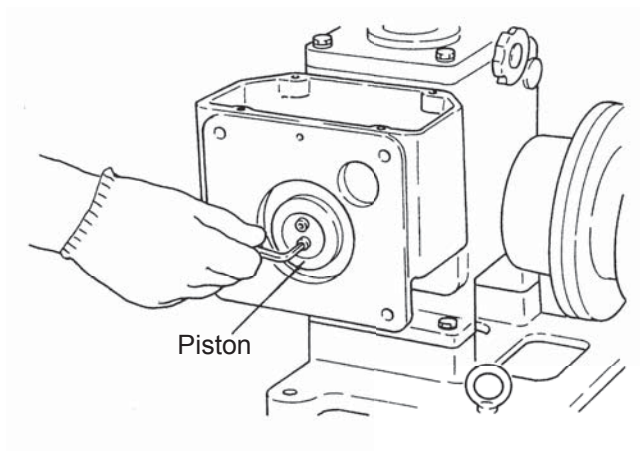


Maintenance

■ Assembly


Assembly can be done in reverse procedure to disassembly.

1. Before assembly, clean each part to remove oil and foreign matters.
2. Apply sealing tape to the drain plugs and mount them to the bracket and cylinder head.
3. **For the AXA-52 and AXB-68**
Fit the piston O ring (118) to the piston (117) and the crosshead O ring (120) to the crosshead (119). Then mount the piston (117) to the crosshead (119) and connect them by tightening the hexagon socket head bolts (121) fully so that it will not loosen.
4. Apply oil to the sliding surfaces of the piston (117) and the cylinder (126). And then place the cylinder (126) and the cylinder gasket (166) to the bracket (158).
5. Place the cylinder-fixing O ring (127) in the cylinder insertion hole on the cylinder head. Mount the cylinder head with the oil compensator valve assembly on it to the bracket. Use the mounting bolts of the strength classification 8T (JIS B1051: "8" is marked on the bolt head) to fix the cylinder head. Push the slide valve (139) of the oil compensator valve assembly to see if it slides smoothly. Rotate the slide valve so that one of holes on surface looks upward.
6. Fit the rear plate (110) into the groove on the cylinder head. One of the outermost holes on the rear plate should come to the top centre. See below.

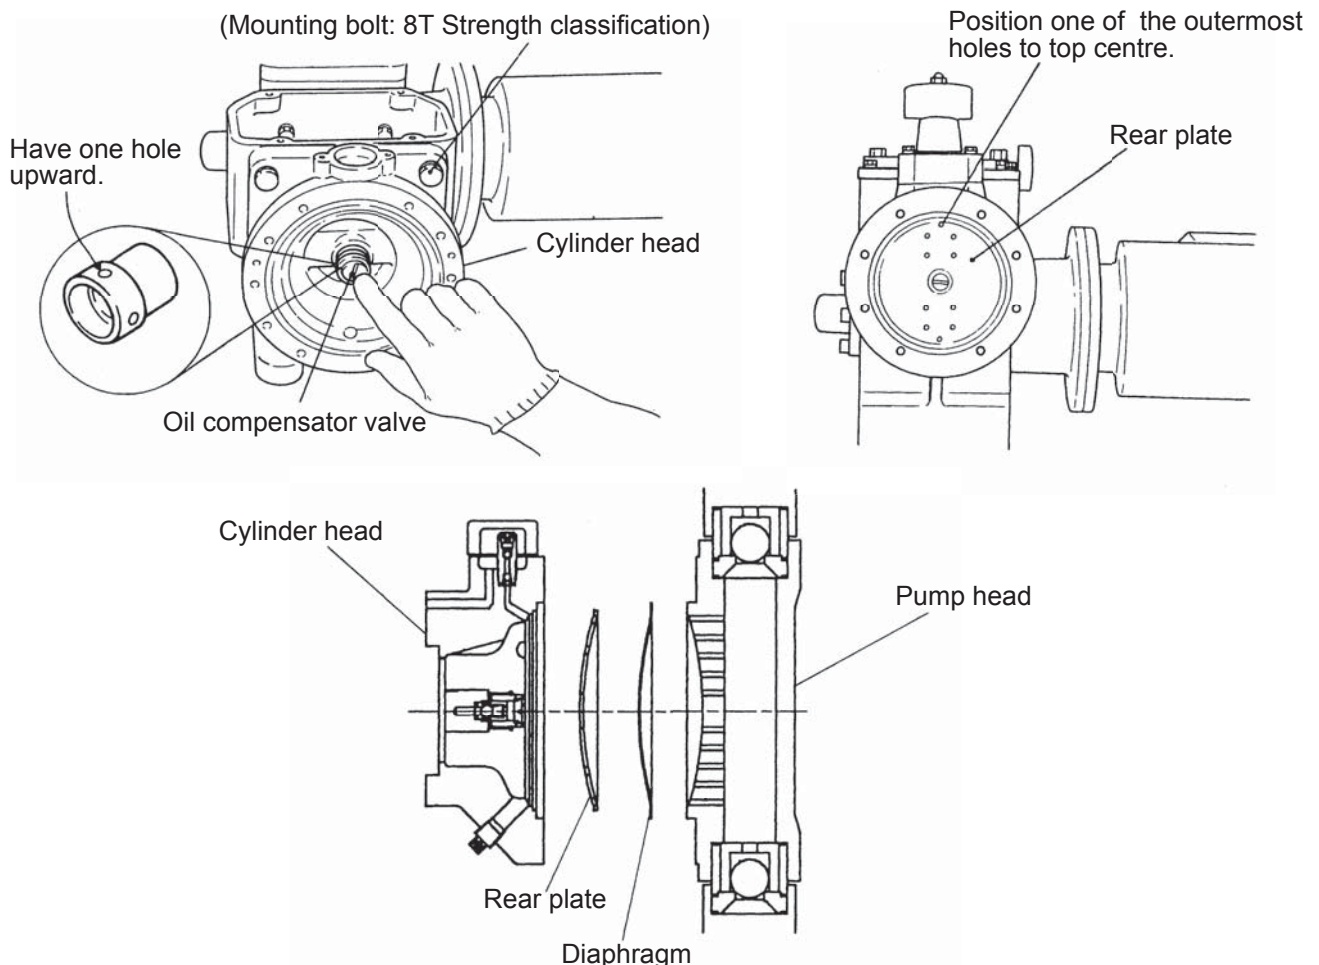

Maintenance

7. Fit the diaphragm (The rear diaphragm for the double diaphragm type) into the groove on the cylinder head.
- *8. Apply sealing tape to the lower drain plug (171) and mount it to the insert chamber (114). Secure the drain plug tightly for the prevention of leakage.
- Instructions marked with * are for WM models only but not for DM models.
- *9. Mount the insert chamber to the cylinder head.
- ① Tighten the insert chamber mounting bolts (115) evenly.
 - ② See the following diagram for mounting the rear plate and diaphragms. Mount the rear plate with one of the outermost holes at top centre.
 - ③ If a diaphragm is damaged or deformed, replace it with new one.
 - ④ If the hemispherical surface of a diaphragm has creases or unevenness, smooth them out with the hands or dip the diaphragm in hot water (70-80°C) for 30 seconds and then cool it down in cold water to reshape the spherical surface. Using a diaphragm with creases or unevenness, adequate level of the enclosed liquid can not be filled to the insert chamber and an accurate discharge cannot be obtained.
- *10. Fit the first diaphragm into the insert chamber. Refer to ②, ③, and ④ on item 9.

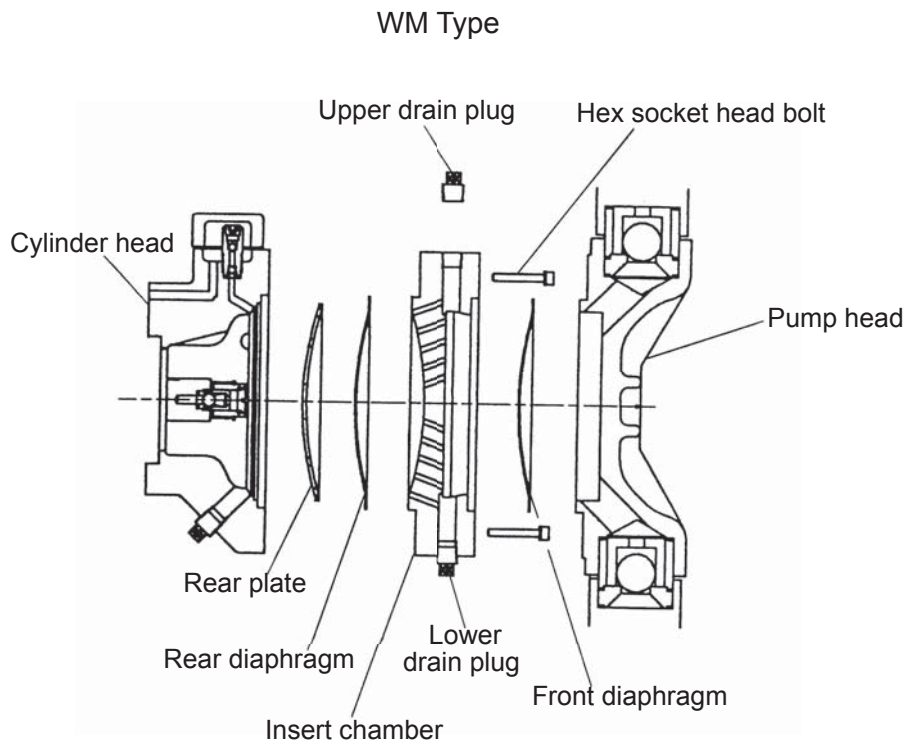


Maintenance

11. Secure the pump head to the cylinder head (or to the insert chamber for the double diaphragm type) by tightening the hex. socket head bolts (16) evenly. The tightening procedure is as follows:

- ① First, tighten the bolts lightly by a hexagon rod wrench.
- ② Then, retighten them by the following torque in the table. Retightening should be done little by little to the specified tightening torque.

NOTE: The bolts should be tightened diagonally in the numerical order shown below.


NOTE: Excessive tightening will damage the diaphragm or cause other problems.

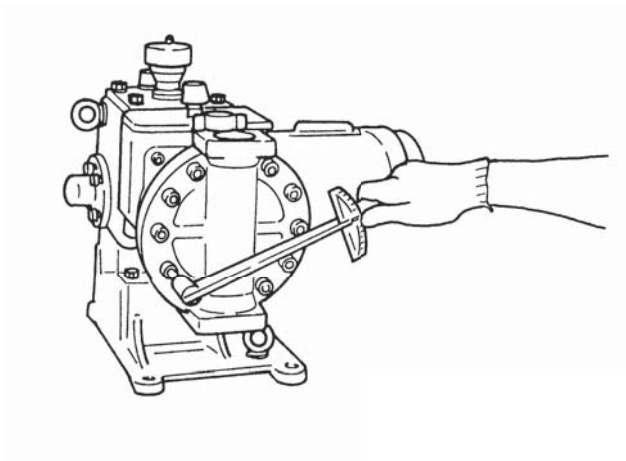

Tightening torque Unit : N•m{kgf•cm}

Pump type Pump head size	S6
D3	5.9 {60}
D15	6.9 {70}
D25	10.8 {110}
D90	22.5 {230}
D170	23.5 {240}

Order for tightening pump head

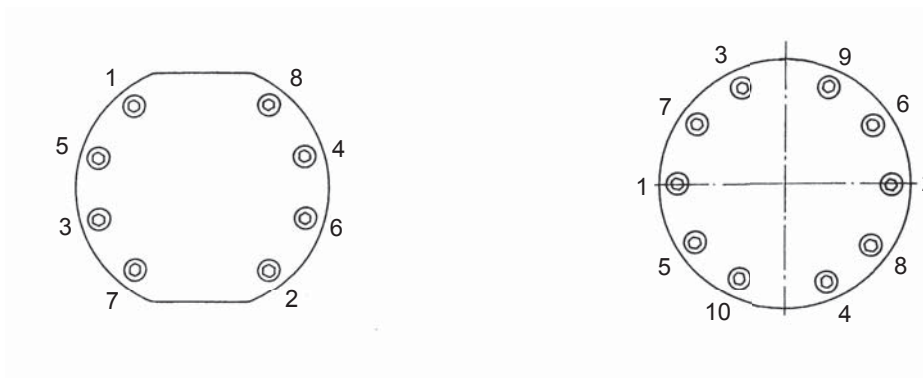

Maintenance


- *12. Gradually pour the enclosed liquid via the upper drain plug hole until the insert chamber (114) is completely filled. Leave it for about 5 minutes and check if liquid level reduces or not. If it reduces, replenish the liquid. In the last place apply seal tape to the drain plug (171) and tighten it to close the plug hole.

Enclosed liquid level (Reference value)

(Unit: ml)

Pump head size Pump head type	D3	D15	D25	D90	D170
WM	22	58	76	260	450

13. Attach the suction & discharge valves and inlet & outlet flanges to the pump head, paying attention to the following points:
- Be sure to mount the valve seat and valve guide in the correct order and direction. See page 36 for installation of the suction & discharge valves.
 - For the pump head size of D90 and D170, tighten the mounting bolts evenly on the Retaining flanges to secure the Inlet and the outlet.
14. Set the stroke length to 0%.
15. Slowly pour suitable oil into the hydraulic unit, taking care not to generate foam. Fill oil up to the mid-level of the oil gauge on the driving unit and leave it for five minutes. For usable oil brands, see page 21 "Required oil level".
- Note that if the plug on the driving unit is not replaced by the air breather, oil cannot flow into the driving unit via the connecting hole. See "6. Before Installation".


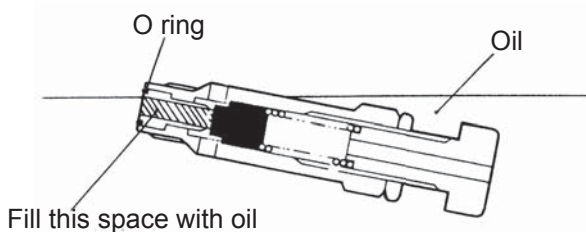


16. Install the relief valve and the automatic air vent valve. See page 22 Items 8 & 9 "Oil change procedure".

Maintenance

■ Adjustment of hydraulic oil level

After completing assembling, run the pump to eliminate the residual air out of the hydraulic chamber through the automatic air vent valve assembly so that oil can be at an adequate level. If the air is not eliminated completely, the metering precision may significantly reduce. Note that the air elimination operation should be done under no-load condition.

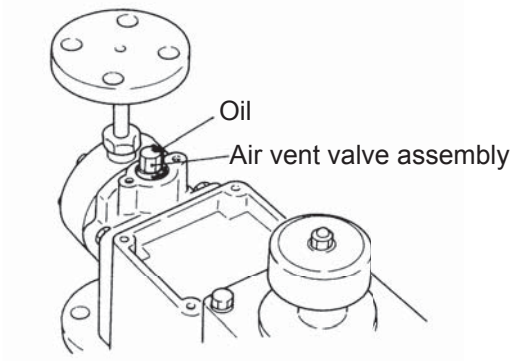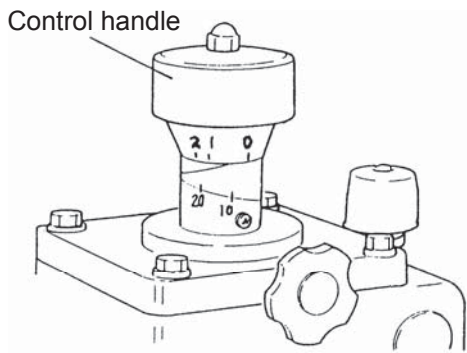

1. Set the stroke length to 100% by rotating the control handle. Run the pump for 2-3 minutes. Turn the control handle and set it at 100%.
2. Decrease the stroke length to 30% and run the pump for 2-3 minutes.
3. Return the stroke length to 100% and run the pump for 2-3 minutes.
4. Repeat this air elimination operation more than three times.
5. After the air elimination operation, confirm that oil is discharged from the automatic air vent assembly (See the left diagram.). If the oil level decreases after the air elimination, add oil up to the middle of the oil gauge of the driving unit.
6. Attach the bracket cover and the air vent cover.
7. Make no-load running with 100% stroke length for 10 minutes.
8. Connect the pump in the piping system and start operation. Be sure to open all the related valves on both discharge & suction side pipes before operation. Do not narrow or close any valve during operation.

Maintenance

■ Handling of relief valve


Never loosen the relief nut (151) because the relief valve has already been set in accordance with the specified discharge pressure. When removing the relief valve for oil change or inspection, always remove it as a unit.

- Do not use the pump at any discharge pressure than specified one.
- Contact us if any operating condition is changed. If discharge pressure increases, the comprehensive check is requested for the pressure resistance of wet end, motor power, and the load to piston end.

■ Motor mounting

After the couplings are fitted to the pump shaft and the motor shaft, check that the dimension A and B are equal by the depth gauge. In the last place tighten the set screws to fix the couplings.

Note that dimension A is from the flange edge to the convex on the coupling rubber.

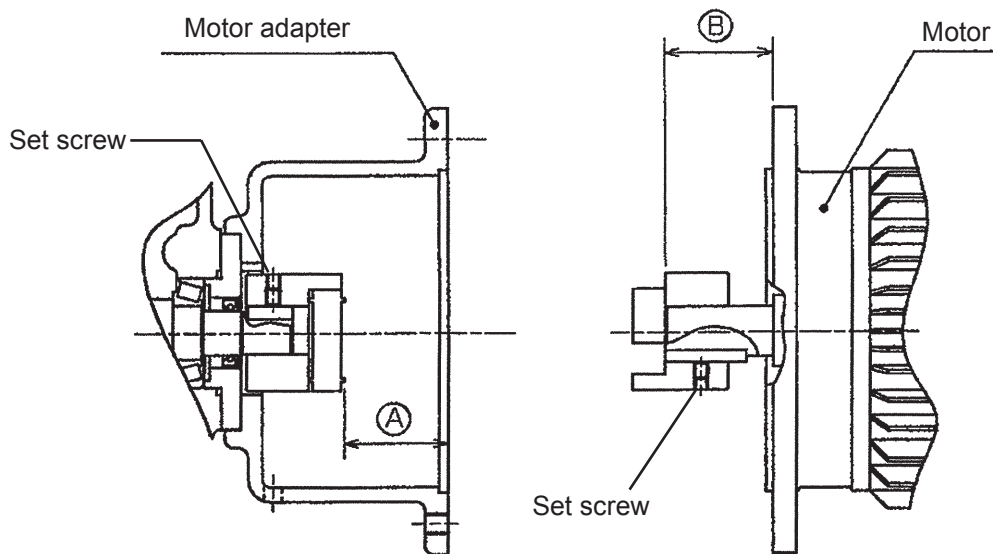

Maintenance

11. Normal Consumable Parts

Always stock the appropriate number of normal consumable parts when the pump is used for a long period of continuous operation. Contact us with the following information when placing an parts order.

- ① Names of parts and parts number. Refer to "12. Exploded View".
- ② Pump model code and manufacturing number. See nameplate on the product.
- ③ Drawing number (If you have our approval drawing.)

No.	Name	Expected life (RV)	DM•WM3S6	DM•WM15S6	DM•WM25S6	DM•WM90S6
			Quantity			
2	Valve seat	1 year	4			2
3	Valve					
4	Valve guide					
5	Valve gasket		12			6
111	Diaphragm		1 (2 for WM type)			

O ring size and piston diameters (No.118)

Piston diameter	Expected life (RV)	O ring size
11	1 year	JIS B 2401 P8
15		JIS B 2401 P11
22		JIS B 2401 P18
30		JIS B 2401 P24
42		JIS B 2401 P36
52		JIS B 2401 P46
68		JIS B 2401 P58


NOTE: The lives of spare parts depend on the liquid pressure, liquid temperature, liquid properties. The expected life shown above is calculated on the continuous operation with clean water at normal temperature.

Maintenance


12. Exploded View

■ Pump head

Pump head sizes (D3 • 15 • 25)

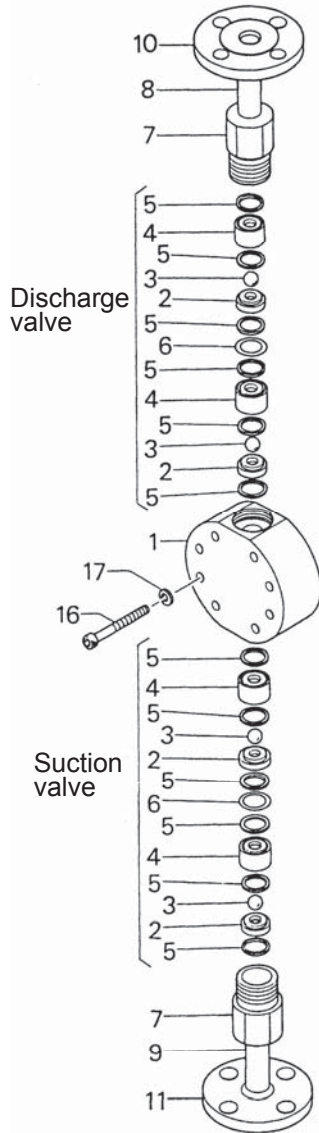

Pump head size (D90 • D170)

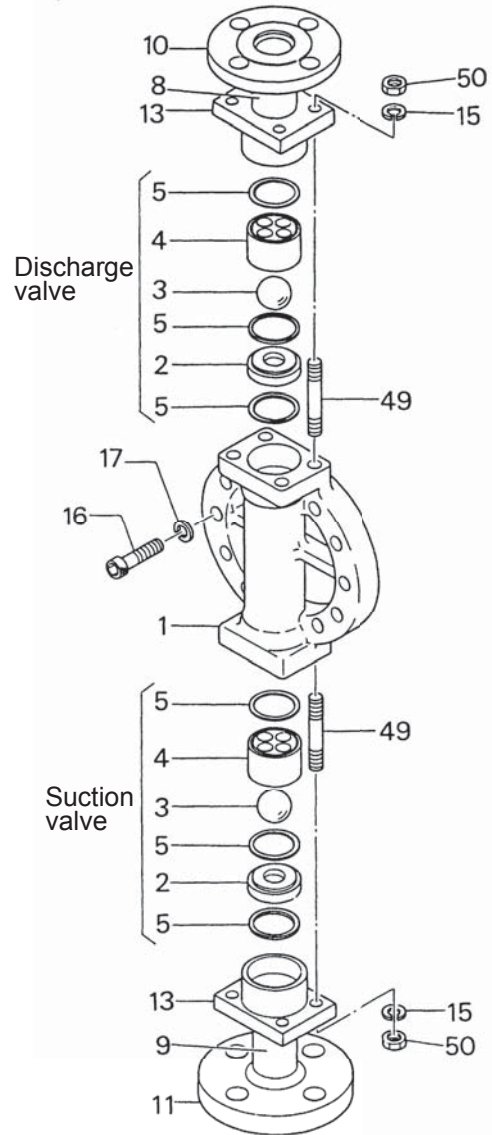


No.	Name	Quantity	No.	Name	Quantity
1	Pump head	1	10	Flange	1
2	Valve seat	4	11	Flange	1
3	Valve	4	13	Retaining flange	2
4	Valve guide	2 or 4	15	Spring washer	8
5	Valve gasket	12 or 6	16	Hexagon head bolt	—
6	Seal plate	2	17	Spring washer	—
7	Valve cap	2	49	Stud bolt	8
8	Outlet	1	50	Hexagon nut	8
9	Inlet	1			

Maintenance

■ Hydraulic unit

The unit is totally exploded in the diagram for easy comprehension, however, dismantlement is limited to the extent shown in the "8. Maintenance & Inspection" and "10. Disassembly & Assembly" sections.

AXJ-11 and 15 types

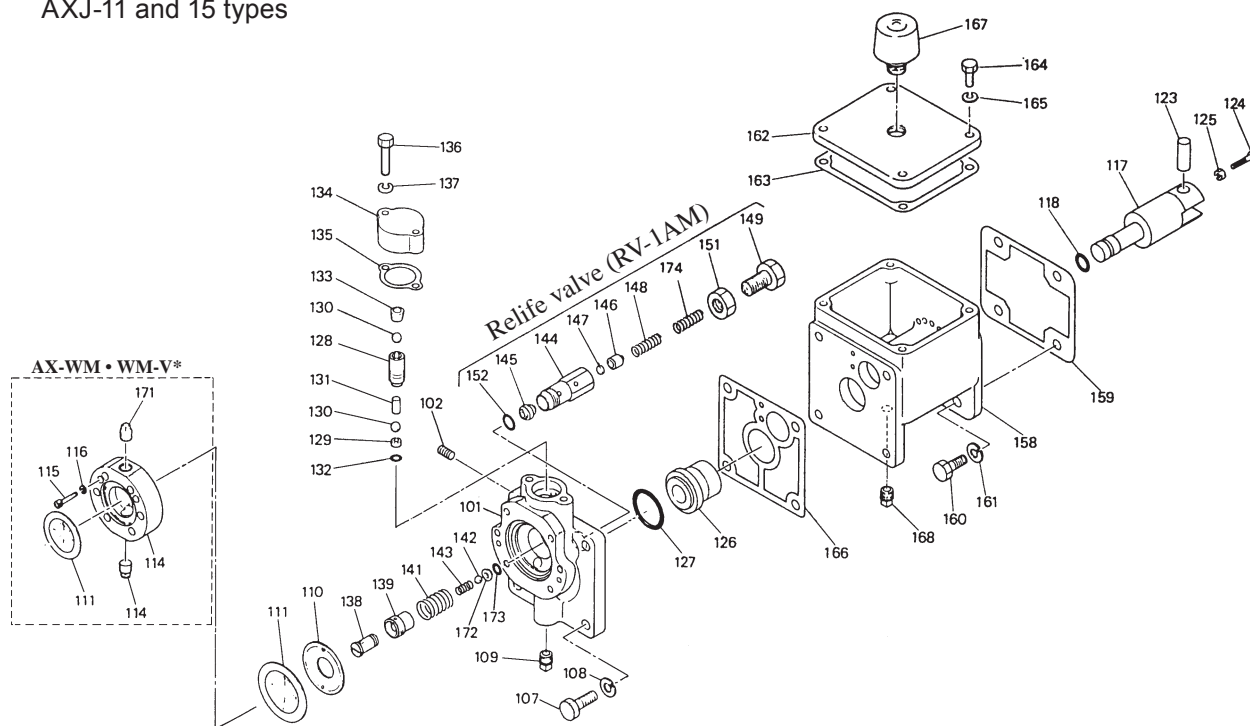


No.	Name	Quantity	No.	Name	Quantity	No.	Name	Quantity
101	Cylinder head	1	130	Air vent valve	2	149	Pressure adjusting bolt	1
107	Hexagon head bolt	4	131	Separate pin	1	151	Relief nut	1
108	Spring washer	4	132	O ring	1	152	O ring	1
109	Drain plug	1	133	Air vent plug	1	158	Bracket	1
110	Rear plate	1	134	Air vent cover	1	159	Case gasket	1
111	Diaphragm	1(2 in WL)	135	Air vent cover gasket	1	160	Hexagon head bolt	4
*114	Insert chamber	1	136	Hexagon head bolt	2	161	Spring washer	4
*115	Hexagon socket head bolt	2	137	Spring washer	2	162	Bracket cover	1
*116	Spring washer	2	138	Oil compensator valve assembly housing	1	163	Cover gasket	1
117	Piston	1	139	Slide valve	1	164	Hexagon head bolt	4
118	O ring	1	141	Spring	1	165	Spring washer	4
123	Crosshead pin	1	142	Check valve	1	166	Cylinder gasket	1
124	Hexagon head bolt	1	143	Check valve spring	1	167	Air breather	1
125	Hexagon nut	1	144	Case	1	168	Drain plug	1
126	Cylinder	1	145	Valve seat	1	*171	Drain plug	2
127	O ring	1	146	Valve base	1	172	Valve seat	1
128	Air vent assembly housing	1	147	Gasket	1	173	O ring	1
129	Valve seat	1	148	Spring 1	1	174	Spring 2	1

Those marked with * are only for WM (double diaphragm) models.

Maintenance

The unit is totally exploded in the diagram for easy comprehension, however, dismantlement is limited to the extent shown in the "8. Maintenance & Inspection" and "10. Disassembly & Assembly" sections.

AXJ-22 & 30, AXK-22 & 30, and AXA-30 & 42 types

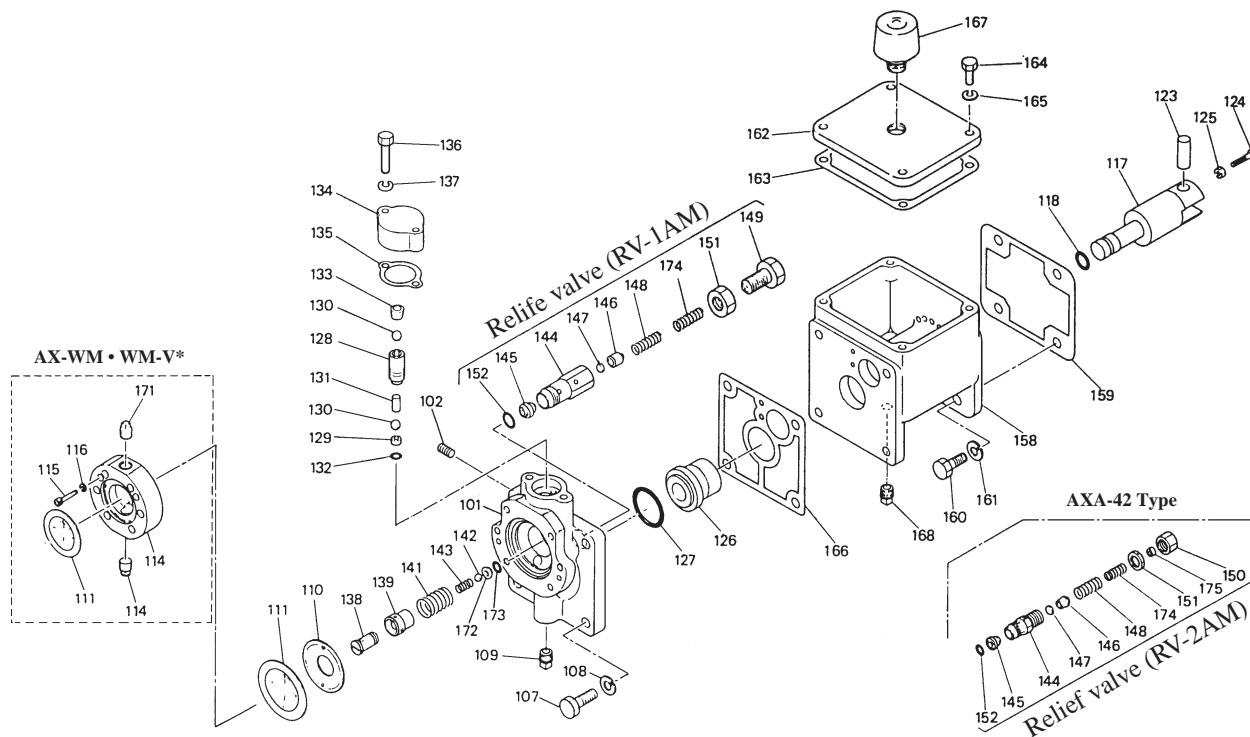


No.	Name	Quantity	No.	Name	Quantity	No.	Name	Quantity
101	Cylinder head	1	130	Air vent valve	2	150	Cap	1
102	Hexagon socket set screw	1	131	Separate pin	1	151	Relief nut	1
107	Hexagon head bolt	4	132	O ring	1	152	O ring	1
108	Spring washer	4	133	Air vent plug	1	158	Bracket	1
109	Drain plug	1	134	Air vent cover	1	159	Case gasket	1
110	Rear plate	1	135	Air vent cover gasket	1	160	Hexagon head bolt	4
111	Diaphragm	1(2 in WL)	136	Hexagon head bolt	2	161	Spring washer	4
*114	Insert chamber	1	137	Spring washer	2	162	Bracket cover	1
*115	Hexagon socket head bolt	2	138	oil compensator valve assembly housing	1	163	Cover gasket	1
*116	Spring washer	2	139	Slide valve	1	164	Hexagon head bolt	4
117	Piston	1	141	Spring	1	165	Spring washer	4
118	O ring	1	142	Check valve	1	166	Cylinder gasket	1
123	Crosshead pin	1	143	Check valve spring	1	167	Air breather	1
124	Hexagon head bolt	1	144	Case	1	168	Drain plug	1
125	Hexagon nut	1	145	Valve seat	1	*171	Drain plug	2
126	Cylinder	1	146	Valve base	1	172	Valve seat	1
127	O ring	1	147	Gasket	1	173	O ring	1
128	Air vent assembly housing	1	148	Spring 1	1	174	Spring 2	1
129	Valve seat	1	149	Pressure adjusting bolt	1	175	Spring seat	1

Those marked with * are only for WM (double diaphragm) models.

Maintenance

The unit is totally exploded in the diagram for easy comprehension, however, dismantlement is limited to the extent shown in the "8. Maintenance & Inspection" and "10. Disassembly & Assembly" sections.

AXA-52 and AXB-68 type

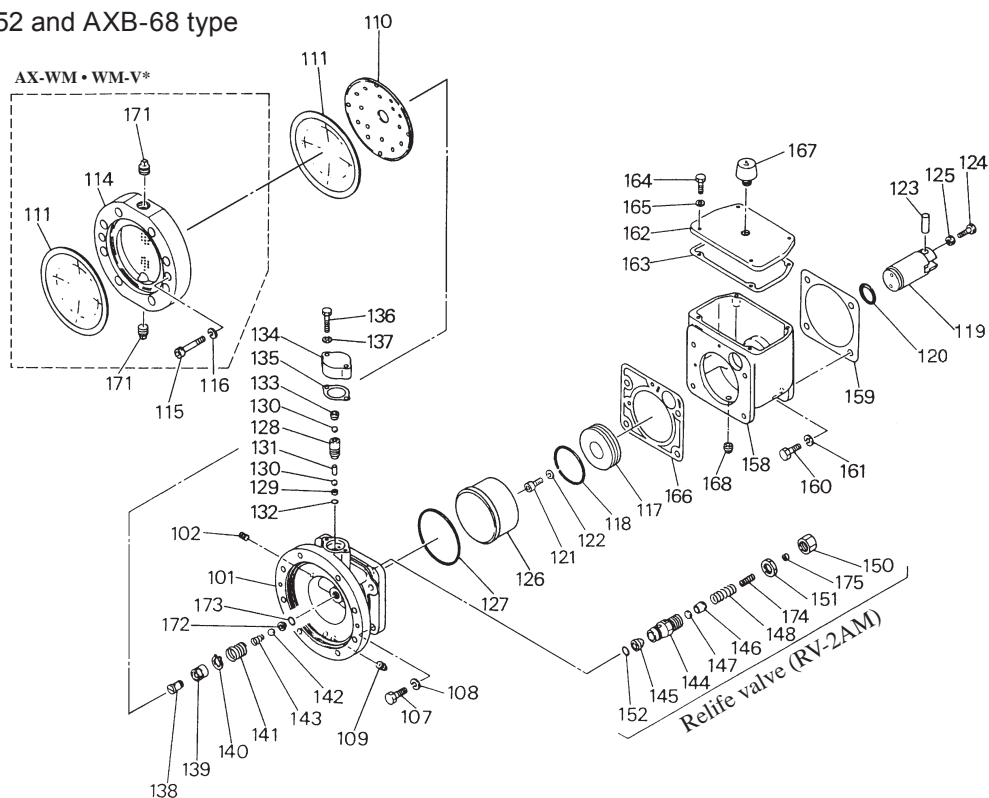


No.	Name	Quantity	No.	Name	Quantity	No.	Name	Quantity
101	Cylinder head	1	128	Air vent assembly housing	1	150	Cap	1
102	Hexagon socket set screw	1	129	Valve seat	1	151	Relief nut	1
107	Hexagon head bolt	4	130	Air vent valve	2	152	O ring	1
108	Spring washer	4	131	Separate pin	1	158	Bracket	1
109	Drain plug	1	132	O ring	1	159	Case gasket	1
110	Rear plate	1	133	Air vent plug	1	160	Hexagon head bolt	4
111	Diaphragm	1(2 in WL)	134	Air vent cover	1	161	Spring washer	4
*114	Insert chamber	1	135	Air vent cover gasket	1	162	Bracket cover	1
*115	Hexagon socket head bolt	2	136	Hexagon head bolt	2	163	Cover gasket	1
*116	Spring washer	2	137	Spring washer	2	164	Hexagon head bolt	4
117	Piston	1	138	Oil compensator valve assembly housing	1	165	Spring washer	4
118	O ring	1	139	Slide valve	1	166	Cylinder gasket	1
119	Crosshead	1	140	Stop ring	1	167	Air breather	1
120	O ring	1	141	Spring	1	168	Drain plug	1
121	Hexagon socket head bolt	2	142	Check valve	1	*171	Drain plug	2
122	Spring washer	2	143	Check valve spring	1	172	Valve seat	1
123	Crosshead pin	1	144	Case	1	173	O ring	1
124	Hexagon head bolt	1	145	Valve seat	1	174	Spring 2	1
125	Hexagon nut	1	146	Valve base	1	175	Spring seat	1
126	Cylinder	1	147	Gasket	1			
127	O ring	1	148	Spring 1	1			

Those marked with * are only for WM (double diaphragm) models.

Maintenance

The unit is totally exploded in the diagram for easy comprehension, however, dismantlement is limited to the extent shown in the "8. Maintenance & Inspection" and "10. Disassembly & Assembly" sections.

AXB-42 and 52 type

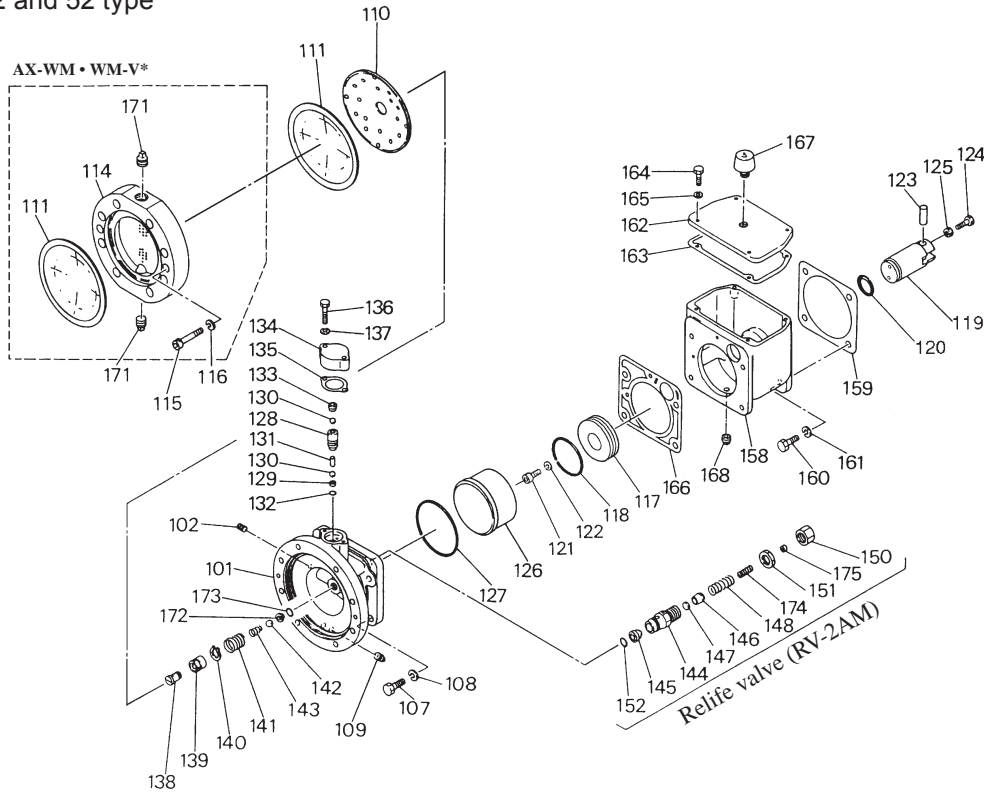

No.	Name	Quantity	No.	Name	Quantity	No.	Name	Quantity
101	Cylinder head	1	131	Separate pin	1	151	Relief nut	1
102	Hexagon socket set screw	1	132	O ring	1	152	O ring	1
107	Hexagon head bolt	4	133	Air vent plug	1	158	Bracket	1
108	Spring washer	4	134	Air vent cover	1	159	Case gasket	1
109	Drain plug	1	135	Air vent cover gasket	1	160	Hexagon head bolt	4
110	Rear plate	1	136	Hexagon head bolt	2	161	Spring washer	4
111	Diaphragm	1(2 in WL)	137	Spring washer	2	162	Bracket cover	1
*114	Insert chamber	1	138	Oil compensator valve assembly housing	1	163	Cover gasket	1
*115	Hexagon socket head bolt	2	139	Slide valve	1	164	Hexagon head bolt	4
*116	Spring washer	2	140	Stop ring	1	165	Spring washer	4
117	Piston	1	141	Spring	1	166	Cylinder gasket	1
123	Crosshead pin	1	142	Check valve	1	167	Air breather	1
124	Hexagon head bolt	1	143	Check valve spring	1	168	Drain plug	1
125	Hexagon nut	1	144	Case	1	*171	Drain plug	2
126	Cylinder	1	145	Valve seat	1	172	Valve seat	1
127	O ring	1	146	Valve base	1	173	O ring	1
128	Air vent assembly housing	1	147	Gasket	1	174	Spring 2	1
129	Valve seat	1	148	Spring 1	1	175	Spring seat	1
130	Air vent valve	2	150	Cap	1			

Those marked with * are only for WM (double diaphragm) models.





IWAKI CO.,LTD. 6-6 Kanda-Sudacho 2-chome Chiyoda-ku Tokyo 101-8558 Japan
 TEL: (81)3 3254 2935 FAX: 3 3252 8892

()Country codes

Australia	IWAKI Pumps Australia Pty. Ltd.	TEL: (61)2 9899 2411	FAX: 2 9899 2421	Italy	IWAKI Italia S.R.L.	TEL: (39)0444 371115	FAX: 0444 335350
Austria	IWAKI EUROPE GmbH	TEL: (49)2154 9254 0	FAX: 2154 9254 48	Korea	IWAKI Korea Co.,Ltd.	TEL: (82)2 2630 4800	FAX: 2 2630 4801
Belgium	IWAKI Belgium n.v.	TEL: (32)1367 0200	FAX: 1367 2030	Malaysia	IWAKIm Sdn. Bhd.	TEL: (60)3 7803 8807	FAX: 3 7803 4800
China	IWAKI Pumps (Shanghai) Co., Ltd.	TEL: (86)21 6272 7502	FAX: 21 6272 6929	Norway	IWAKI Norge AS	TEL: (47)23 38 49 00	FAX: 23 38 49 01
China	IWAKI Pumps (Guangdong) Co., Ltd.	TEL: (86)750 3866 228	FAX: 750 3866 278	Singapore	IWAKI Singapore Pte. Ltd.	TEL: (65)6316 2028	FAX: 6316 3221
China	GFTZ IWAKI Engineering & Trading (Guangzhou)	TEL: (86)20 8435 0603	FAX: 20 8435 9181	Spain	IWAKI Iberica Pumps, S.A.	TEL: (34)943 630030	FAX: 943 628799
China	GFTZ IWAKI Engineering & Trading (Beijing)	TEL: (86)10 6442 7713	FAX: 10 6442 7712	Sweden	IWAKI Sverige AB	TEL: (46)8 511 72900	FAX: 8 511 72922
Denmark	IWAKI Nordic A/S	TEL: (45)48 24 2345	FAX: 48 24 2346	Switzerland	IWAKI (Schweiz) AG	TEL: (41)26 674 9300	FAX: 26 674 9302
Finland	IWAKI Suomi Oy	TEL: (358)9 2745 810	FAX: 9 2742 715	Taiwan	IWAKI Pumps Taiwan Co., Ltd.	TEL: (886)2 8227 6900	FAX: 2 8227 6818
France	IWAKI France S.A.	TEL: (33)1 69 63 3370	FAX: 1 64 49 92 73	Taiwan	IWAKI Pumps Taiwan (Hsin-chu) Co., Ltd.	TEL: (886)3 573 5797	FAX: (886)3 573 5798
Germany	IWAKI EUROPE GmbH	TEL: (49)2154 9254 0	FAX: 2154 9254 48	Thailand	IWAKI (Thailand) Co.,Ltd.	TEL: (66)2 322 2471	FAX: 2 322 2477
Holland	IWAKI EUROPE NL Branch	TEL: (31)547 293 160	FAX: 547 292 332	U.K.	IWAKI Pumps (UK) LTD.	TEL: (44)1743 231363	FAX: 1743 366507
HongKong	IWAKI Pumps Co., Ltd.	TEL: (852)2 607 1168	FAX: 2 607 1000	U.S.A.	IWAKI AMERICA Inc.	TEL: (1)508 429 1440	FAX: 508 429 1386
Indonesia	IWAKI Singapore (Indonesia Branch)	TEL: (62)21 690 6606	FAX: 21 690 6612	Vietnam	IWAKI pumps Vietnam Co.,Ltd.	TEL: (84)613 933456	FAX: 613 933399